

FMB125 Configuration

[Main Page](#) > [Professional Trackers](#) > [FMB125](#) > **FMB125 Configuration**

Teltonika Configurator

- [Status info](#) [Show more]
 - [Device Info](#)
 - [GNSS Info](#)
 - [GSM Info](#)
 - [I/O Info](#)
 - [FMS I/O Info](#)
 - [Tachograph Data Info](#)
 - [Maintenance](#)
 - [OBD Info](#)
 - [CAN Adapter Info](#)
- [Security info](#)
- [System settings](#) [Show more]
 - [System](#)
 - [Static Navigation Settings](#)
 - [Sleep Mode](#)
- [GPRS settings](#) [Show more]
 - [GPRS Settings](#)
 - [FOTA WEB settings](#)
- [Data acquisition settings](#)
- [SMS settings](#) [Show more]
 - [SMS Data Sending](#)
 - [SMS commands](#)

- [GSM Operators settings](#)
- [Features](#) [Show more]

- [Green Driving](#)
- [Over Speeding](#)
- [Jamming](#)
- [Using authorized numbers to control DOUT via call](#)
- [Immobilizer](#)
- [iButton read notification](#)
- [GNSS Fuel Counter](#)

- [Accelerometer Features](#) [Show more]

- [Excessive Idling](#)
- [Unplug Detection](#)
- [Towing Detection](#)
- [Crash Detection](#)
- [Crash Data Visualisation](#)

- [Auto Geofence settings](#)
- [Manual Geofence settings](#)
- [Trip/Odometer settings](#) [Show more]

- [Trip Settings](#)
- [Advanced Trip Settings](#)
- [Odometer](#)

- [Bluetooth® settings](#) [Show more]

- [General functionality](#)
- [Auto Connect to External Device](#)

- [Bluetooth® 4.0 settings](#)
- [1-Wire](#)
- [Beacon List](#)
- [I/O settings](#) [Show more]

- [Input Name](#)
 - [Current Value](#)
 - [Units](#)
 - [Priority](#)
 - [High and Low Level](#)
 - [Event Only](#)
 - [Operands](#)
 - [Avg Const](#)
 - [Send SMS To](#)
 - [SMS Text](#)
-
- [SMS events](#)
 - [CAN Adapter](#)
 - [RS-232 and RS-485](#)