

FMC800 Security info

[Main Page](#) > [Fast & Easy Trackers](#) > [FMC800](#) > [FMC800 Configuration](#) > **FMC800 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the 'Security' section of the Teltonika FMC800 web interface. The top navigation bar includes the Teltonika logo and a series of buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. On the right, a status bar shows the IMEI, firmware version (FW 03.25.15 Rev: 1.0), and configuration version (6.1.17.0).

The main content area is divided into two sections. The top section, 'Device Info', displays various system parameters in a grid:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.

Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	3566030600000000	00:00:47	Not Charging 0%

The bottom section, 'GNSS Info', contains three sub-sections: 'GNSS Status', 'Satellites', and 'Location'.

GNSS Status:

Module Status	GNSS Packets
ON	32

Fix Status	Fix Time
No fix	00:00:00

Satellites:

Visible:		In Use:	
GPS	GLONASS	GPS	GLONASS
4	0	0	0
BeiDou	Galileo	BeiDou	Galileo
0	0	0	0
Total In View: 4		Total In Use: 0	

Location:

Latitude/Longitude	Altitude	HDOP
0, 0	0	0

Speed	Angle	PDOP
0 km/h	0°	0

The bottom of the interface features a social media bar with icons for Facebook, YouTube, Twitter, Instagram, LinkedIn, and a QR code, along with a settings gear icon on the right.

*Please note that This feature will only show up in configurator when device is connected to a computer.