

How to read data from TZ-BT04/05/05B sensor

[Main Page](#) > [Frequently Asked Questions - FAQ](#) > **How to read data from TZ-BT04/05/05B sensor**



Disclaimer



If you are not using Bluetooth®, **please consider turning it off** or **change Bluetooth® PIN** to remove potential risks.

If you are using Bluetooth® we strongly recommend **using AES encryption** for enhanced security.

Configuration

These are instructions on how to easily read data from **TZ-BT04/05/05B** Bluetooth® LE sensor with Teltonika device.

First the device Bluetooth® settings need to be configured. These are the required steps:

- Press Bluetooth® settings.
 - Turn on **BT Radio** by pressing **Enable (hidden)** or **Enable (visible)**.
- Press Bluetooth® 4.0 settings.
 - Select TZ-BT04/05/05B sensor in **BLE connectionless functionalities** section.
 - Type your TZ-BT04/05/05B ID in ID field.
 - After all these steps press **Save to device** to save configuration.
 - To start BLE scan right away press **Discover BLE**.



To check if the device has already received data from **TZ-BT04/05/05B** Bluetooth® LE sensor,

follow these steps:

- Navigate to **Status** section.
- Press **I/O Info** and look if **BLE Temp**, **BLE Battery** and **BLE Humidity** has any values.