



# FTC881

---

Special and small waterproof tracker

 
Quick Manual v1.0

# CONTENT


Know your device.....	3
Pinout.....	4
Set up your device .....	5
PC Connection (Windows).....	6
How to install USB drivers (Windows).....	6
Configuration (Windows).....	7
Mounting recommendations.....	8
Safety information .....	9

# KNOW YOUR DEVICE


TOP VIEW

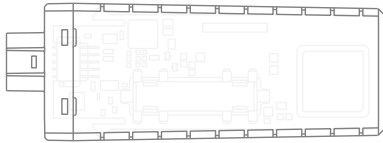

BOTTOM VIEW (WITHOUT COVER)

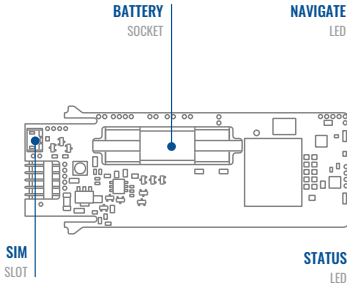 


TOP VIEW (WITHOUT COVER)

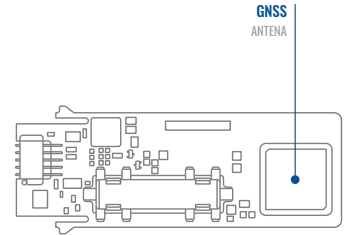 

# PINOUT

 
PIN NUMBER	PIN NAME	DESCRIPTION
1	VCC (10-70)V DC (+)	(Red) Power supply (+10-70 V DC)
2	GND (-)	(Black) Ground

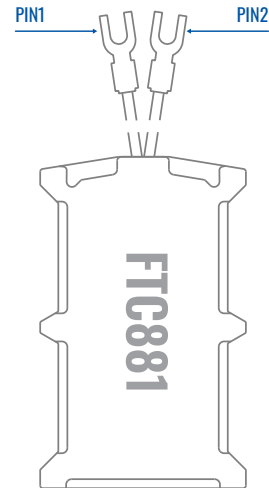

FTC881 pinout

# SET UP YOUR DEVICE
 
## HOW TO INSERT MICRO-SIM CARD AND CONNECT THE BATTERY



### 1 COVER REMOVAL

You will receive your device partly closed.



 
### 2 COVER REMOVAL

Gently remove side cover.




### 3 SIM CARD INSERT

Insert SIM card as shown. Make sure Nano-SIM card cut-off corner is pointing towards SIM slot.



### 4 BATTERY CONNECTION

 Battery is already connected, so after configuring device fully close casing.



### 5 DEVICE IS READY

Device is ready to be mounted.

# PC CONNECTION (WINDOWS)

1. Power- up FTC881 with **DC voltage (10-70V)** power supply using **power wires**.LEDs should start blinking.
2. Connect device to computer using Micro-USB cable and install USB driver, see “[How to install USB drivers \(Windows\)](#)”<sup>1</sup>”

<sup>1</sup>Page 6, "How to install USB drivers"

## HOW TO INSTALL USB DRIVERS (WINDOWS)

1. Please download COM port drivers from [here](#)<sup>1</sup>.
2. Extract and run **TeltonikaCOMDriver.exe**.
3. Click **Next** in driver installation window.
4. In the following window click **Install** button.
5. Setup will continue installing the driver and eventually the confirmation window will appear. Click **Finish** to complete the setup.

<sup>1</sup>[wiki.teltonika-gps.com/images/d/d0/TeltonikaCOMDriver.zip](http://wiki.teltonika-gps.com/images/d/d0/TeltonikaCOMDriver.zip)

# CONFIGURATION (WINDOWS)

At first FTC881 device will have default factory settings set. These settings should be changed according to the user's needs. Main configuration can be performed via [Teltonika Configurator tool](#)<sup>1</sup> (TCT).

<sup>1</sup> [wiki.teltonika-gps.com/view/QSG\\_New\\_platform](http://wiki.teltonika-gps.com/view/QSG_New_platform)

## MS .NET REQUIREMENTS

 
Operating system	MS .NET Framework version	Version	Links
Windows Vista			
Windows 7			
Windows 8.1	MS .NET Framework 4.6.2	32 and 64 bit	<a href="http://www.microsoft.com">www.microsoft.com</a> <sup>1</sup>
Windows 10			

<sup>1</sup> [dotnet.microsoft.com/en-us/download/dotnet-framework/net462](http://dotnet.microsoft.com/en-us/download/dotnet-framework/net462)

# MOUNTING RECOMMENDATIONS

## DEVICE FASTENING

- Locate the battery in your vehicle. If present remove the battery cover to access the battery.
- There is a double sided tape on the back of the device, use it to attach the device on the battery, so that the GNSS antenna and LEDs indicators are facing up.

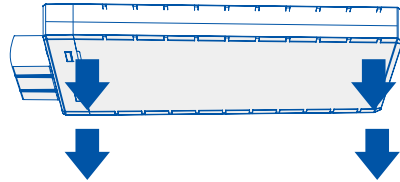


## CONNECTING POWER SOURCE

- Device power wire is designed to be directly connected to the positive terminal fastener of the vehicle battery.

## CONNECTING GROUND WIRE

 - Connect ground wire to the vehicle frame or metal parts that are fixed to the frame.
- If the wire is fixed with the bolt, the loop must be connected to the end of the wire.
- Device ground wire is designed to be directly connected to the negative terminal fastener of the vehicle battery.

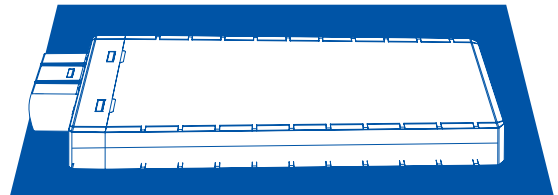



# SAFETY INFORMATION

This message contains information on how to operate FTC881 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

- The device uses a 10 V...70 V DC power supply. The nominal voltage is 12 V DC. The allowed range of voltage is 10 V...70 V DC.
- To avoid mechanical damage, it is advised to transport the device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible. They show the status of device operation.
- Before unmounting the device from vehicle, ignition **MUST be OFF**.



Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, **DO NOT** touch the device before unplugging the power supply.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



The device must be connected only by qualified personnel.



The device must be firmly fastened in a predefined location.



The programming must be performed using a PC with autonomic power supply.



Installation and/or handling during a lightning storm is prohibited.



The device is susceptible to water and humidity if the device housing is not properly closed



Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Battery should not be disposed of with general household waste. Bring damaged or worn-out batteries to your local recycling center or dispose them to battery recycle bin found in stores.