

# DSM PC Driver Installation Guidebook

(v.0.3)



## Recognize DSM in computer (Install RNDIS Driver)

\* Please connect MDSM-22 to your laptop using Micro 5Pin USB cable before install the driver. \*

### 1.1 Computer with Windows XP, 7, 8, 8.1

Download RNDIS installer here: <http://movon.co.kr/downloads/rndissetup.zip>


Please download and unzip it. When you install it, please click the right button on your mouse and select “Run as administrator”.

### 1.2 Computer with Windows 10



① Download RNDIS Driver here: <http://movon.co.kr/downloads/rndisdriver.zip>

② Unzip the file and remember the unzipped folder location.

③ Go to the Device manager and select **a USB serial Port (COM x)** under **Ports (COM & LPT)**.

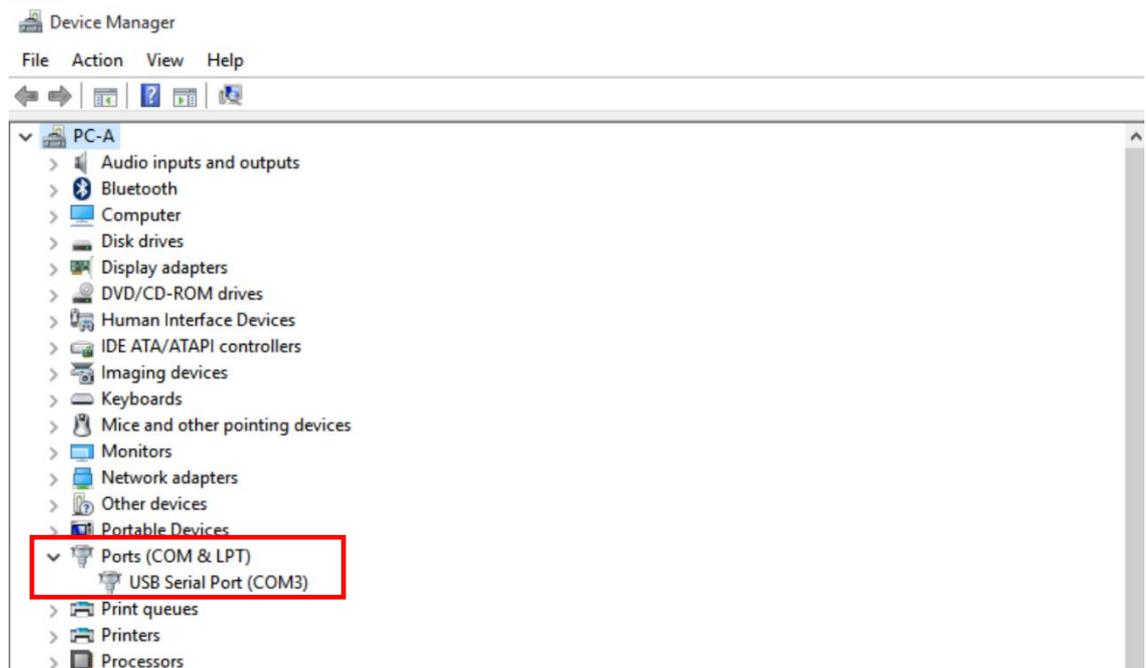


④ Click it using the right button of your mouse, then click “Properties”.

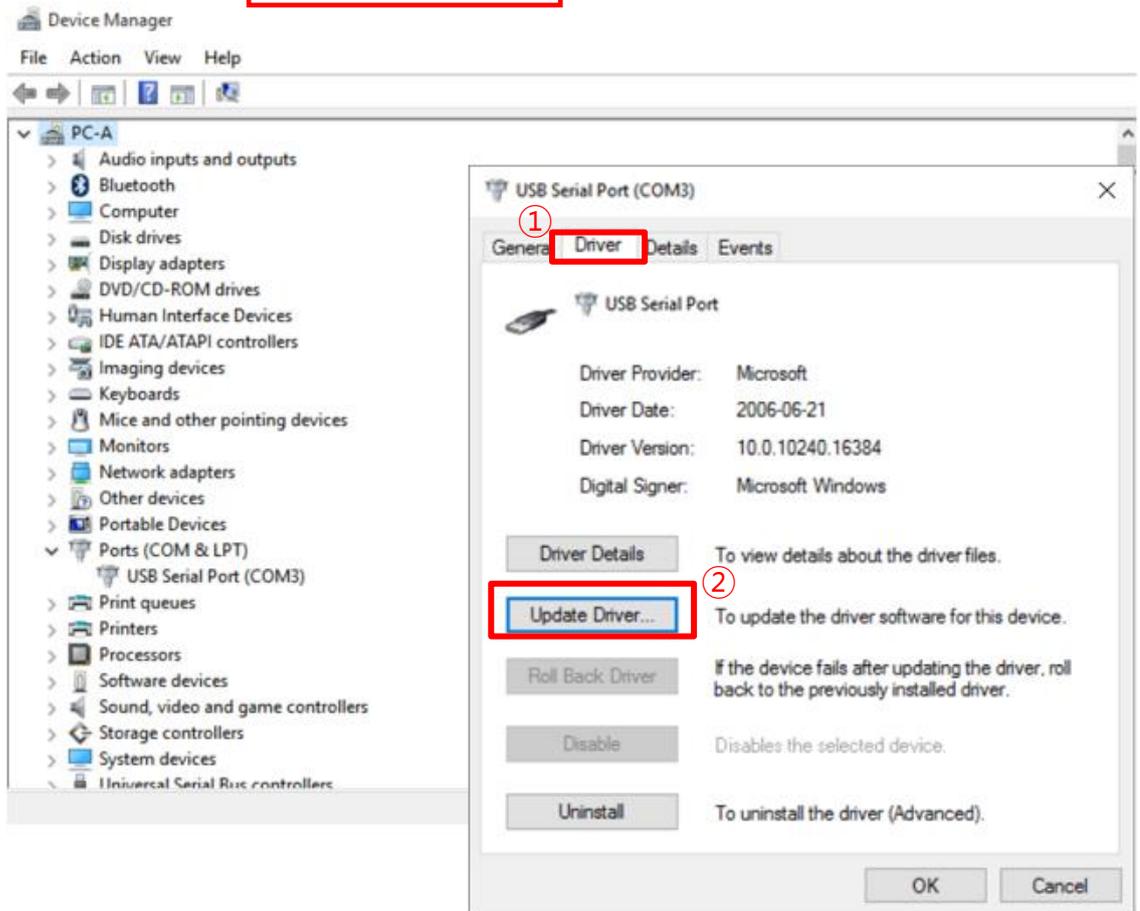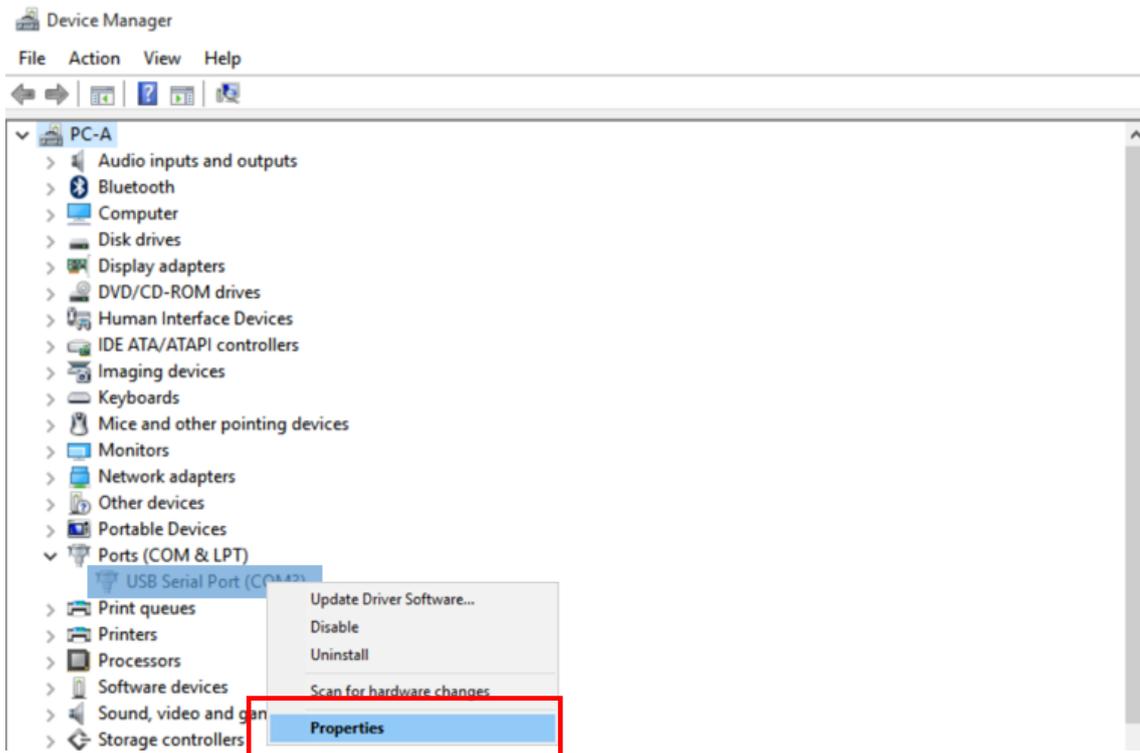


⑤ In the newly popped up window, Go to “Driver” tab, and click “Update Driver”

⑥ Select “Browse my computer for driver software”.

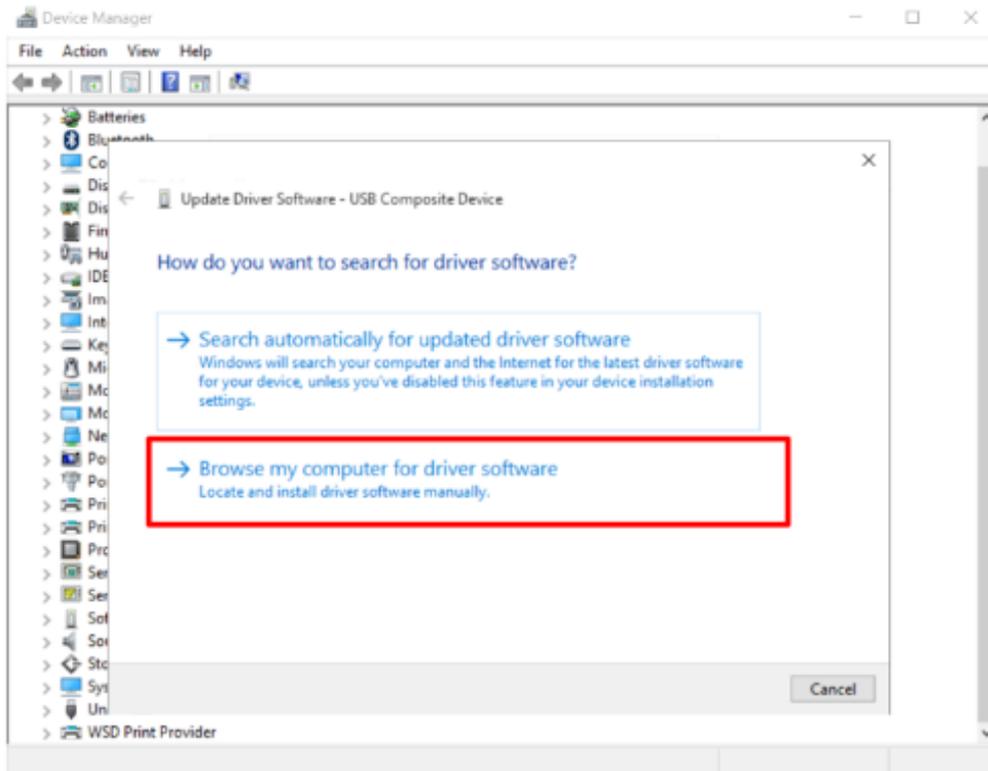


⑦ Click “Browser...” button and “Browse For Folder” window will pop up.

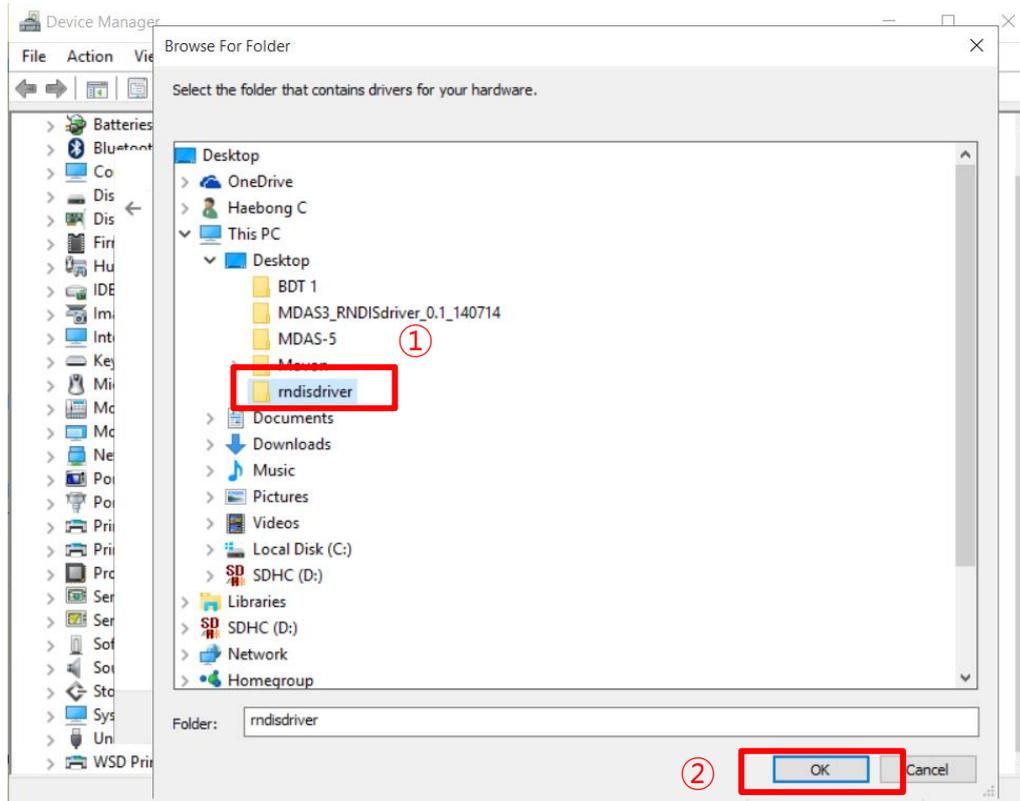


⑧ Choose “rndisdriver”.

\* Remember the path where you downloaded and unzipped the file \*

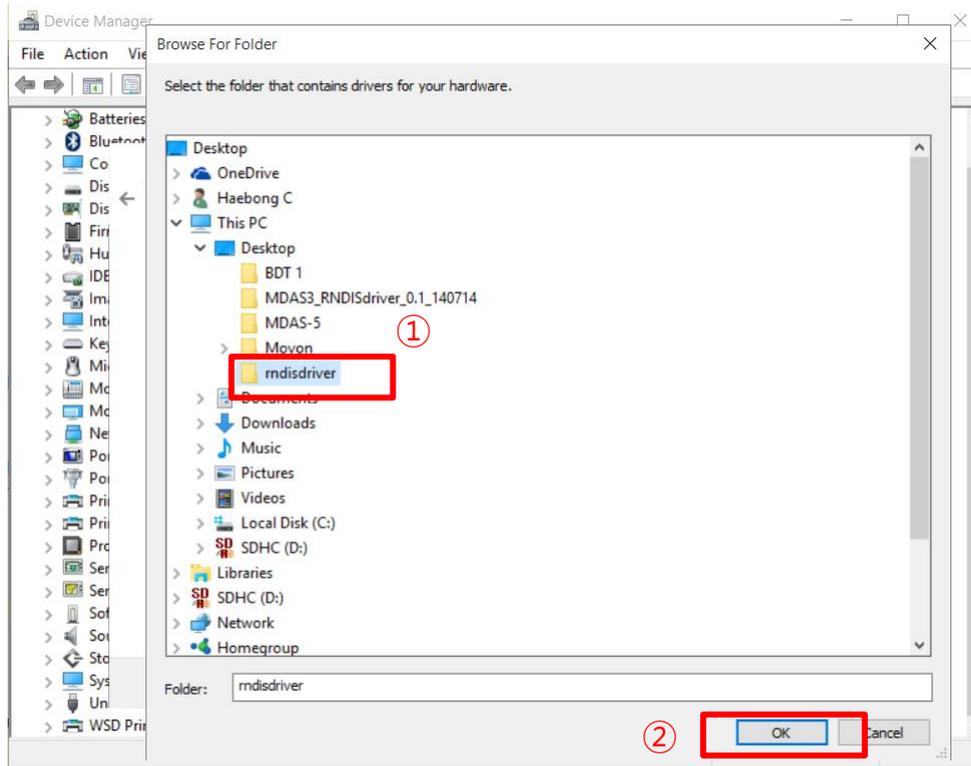

⑨ Press “Next” on the page below.

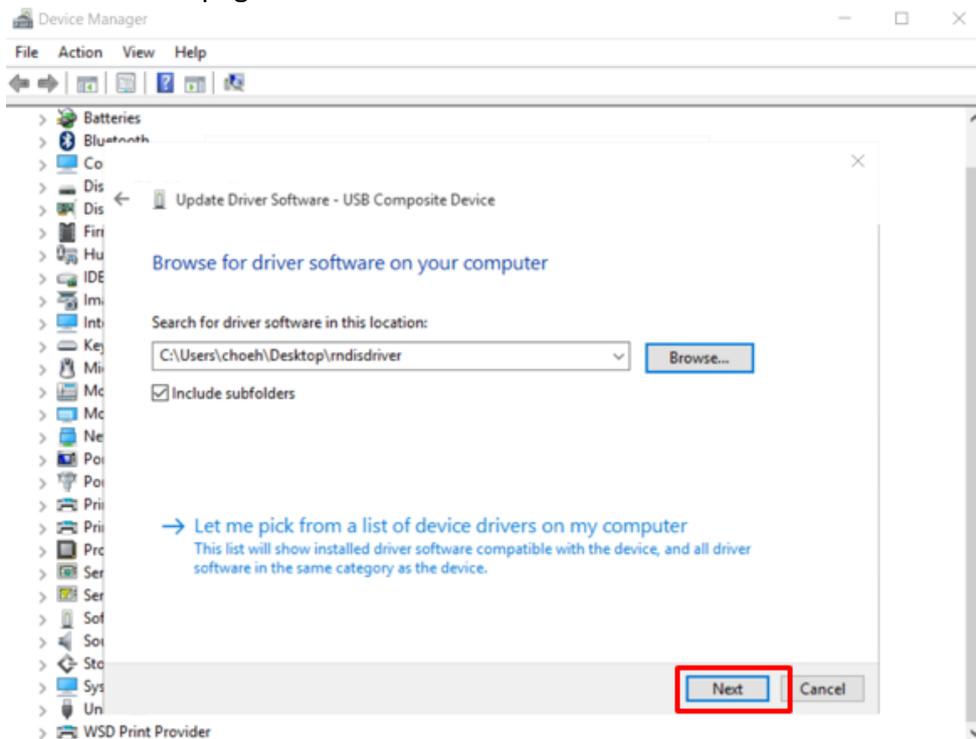

장치 관리자

파일(F) 동작(A) 보기(V) 도움말(H)



- ▼ home-note
  - > Bluetooth
  - > IDE ATA/ATAPI 컨트롤러
  - > WSD 인쇄 공급자
  - ▼ 네트워크 어댑터
    - Qualcomm Atheros QCA61x4A Wireless Network Adapter
    - Realtek PCIe GBE Family Controller
    - TAP-Windows Adapter V9
    - USB Ethernet/RNDIS Gadget #3**
    - WAN Miniport (IKEv2)
    - WAN Miniport (IP)
    - WAN Miniport (IPv6)
    - WAN Miniport (L2TP)
    - WAN Miniport (Network Monitor)
    - WAN Miniport (PPPOE)
    - WAN Miniport (PPTP)
    - WAN Miniport (SSTP)
  - > 디스크 드라이브
  - > 디스플레이 어댑터
  - > 마우스 및 기타 포인팅 장치
  - > 메모리 기술 장치
  - > 모니터