

# FM3001 Auto Geofence Settings

[Main Page](#) > [EOL Products](#) > [FM3001](#) > [FM3001 Configuration](#) > **FM3001 Auto Geofence Settings**

### Auto Geofence

Scenario Settings

<input checked="" type="radio"/> Disable	<input type="radio"/> Low Priority
<input type="radio"/> High Priority	<input type="radio"/> Panic Priority

Eventual Records

<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
-------------------------------	---

Generate Event

<input checked="" type="radio"/> On Exit	<input type="radio"/> On Entrance
<input type="radio"/> On Both	

Activation Timeout (s)

Radius (m)

Send SMS To

SMS Text

*AutoGeofence* is based on the last known position after the movement has stopped. You can be notified using this function if your car is taken away. The shape and size of Geofence zones are set by parameters. It is possible to state whether entering or leaving the geofence triggers an asynchronous message. AutoGeofencing options can be configured by following parameters as depicted in the right hand side figure:

Activation timeout defines the delay between the creation of AutoGeofence within set *Radius* value around vehicle's most recent position and when the ignition is off. Note that AutoGeofencing does not require entering coordinates, instead it requires GPS visibility. Event generation can take place on Geofence **Entrance**, **Exit** or **On Both**. *Eventual Records* is used to enable or disable *Eventual Records* functionality.