

# FM3612 LED status

[Main Page](#) > [EOL Products](#) > [FM3612](#) > [FM3612 Manual](#) > **FM3612 LED status**

This section is an explanation of LED indications on an FM3612 device.

## Navigation LED Indications

Behaviour	Meaning
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sleep mode
Blinking fast constantly	Device firmware is being flashed

## Status LED Indications

Behaviour	Meaning
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode