

FM3622 GSM settings, operator list

[Main Page](#) > [EOL Products](#) > [FM3622](#) > [FM3622 Configuration](#) > **FM3622 GSM settings, operator list**

Operators list - FM3622 can work in different modes (use different settings) according to the operator list defined. Operator list is used for Data Acquisition Mode switching ([Data Acquisition Mode settings](#) for more details). Modes are changed based on 3G/GSM operator FM3622 is connected to.



If operator list is left empty, it will allow using GPRS to any GSM operator. Please note that FM3622 will work in Unknown mode only (make sure it is configured to allow data sending - GPRS context is enabled).