

[https://wiki.teltonika-gps.com/view/FM36M1\\_GSM\\_settings,\\_GPRS\\_part](https://wiki.teltonika-gps.com/view/FM36M1_GSM_settings,_GPRS_part)

# FM36M1 GSM settings, GPRS part

[Main Page](#) > [EOL Products](#) > [FM36M1](#) > [FM36M1 Configuration](#) > **FM36M1 GSM settings, GPRS part**

GPRS defines main parameters for FM36M1: GSM operator APN and GPRS username and password (optional - depending on operator), destination server IP and port, and allows to set protocol used for data transfers - TCP or UDP.

Yet user can choose if device will work only in GSM network, or it will prefer 4G network and switch to GSM only then 4G is absent.

