

# FM36M1 GSM settings, operator list

[Main Page](#) > [EOL Products](#) > [FM36M1](#) > [FM36M1 Configuration](#) > **FM36M1 GSM settings, operator list**

Operators list - FM36M1 can work in different modes (use different settings) according to the operator list defined. Operator list is used for Data Acquisition Mode switching ([Data Acquisition Mode settings](#) for more details). Modes are changed based on 4G/GSM operator FM36M1 is connected to.



If operator list is left empty, it will allow using GPRS to any GSM operator. Please note that FM36M1 will work in Unknown mode only (make sure it is configured to allow data sending - GPRS context is enabled).