

FM36 Operator list

Parameter defines operator list. According to this list module selects operating profile. GSM operator codes are comma separated. First in a list is Home Operator Code, then Preferred Roaming Operator Codes are written.

X defines starting position that is changed: If X is from 0 to 49, X means index of operator code which has to be configured. Up to 20 operator codes may be configured in 1 SMS. Example:

" *setparam 1271 16 24602,24603,24605*"

Here 16th, 17th and 18th operator codes are set. **Note! Other operator codes are left unchanged in the configuration.**

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
1271	U32	""	Empty	7 digits		Name