

[https://wiki.teltonika-gps.com/view/FM36\\_getio](https://wiki.teltonika-gps.com/view/FM36_getio)

# FM36 getio

Response details	Description
<b>DI#</b>	Digital Input state
<b>AIN#</b>	Analog Input state
<b>DO#</b>	Digital Output state

Example: DI1:0 DI2:0 DI3:0 AIN:0.0611 DO1:0 DO2:0