

# FM36 getparam 1271

X values can be 1,2,3.

- If X = 1, Operator codes from 0-19 are read from configuration and sent via SMS.
- If X = 2, Operator codes from 20-39 are read from configuration and sent via SMS.
- If X = 3, Operator codes from 40-49 are read from configuration and sent via SMS.
- If X = any other, Operator codes from 0-19 are read from configuration and sent via SMS.