

# FM36 getweektime

Response details	Description
<b>Clock Sync</b>	Indicates system clock synchronization status. 0 - System is not synchronized, 1 - System synchronized
<b>DOW</b>	Day Of Week - indicates current day of week starting from 1 - Monday, 2 - Tuesday, etc.
<b>Time</b>	Indicates current GMT time
<b>WeekTime</b>	Indicates time in minutes starting from Monday 00:00 GMT

Example: Clock Sync: 1 DOW: 4 Time 12:58 Weektime: 6538