

[https://wiki.teltonika-gps.com/view/FM36\\_readops](https://wiki.teltonika-gps.com/view/FM36_readops)

# FM36 readops

Send from device Operator List.

1. send first 20 operator codes;
2. send from 21st to 40th operator codes,
3. send all other operator codes.