

FM6300 GPRS

[Main Page](#) > [EOL Products](#) > [FM6300](#) > [FM6300 Configuration](#) > **FM6300 GPRS**

'GPRS' defines main parameters for FM6300: destination servers Domain (can be entered either IP or domain name) and port. Also both TCP and UDP protocols are supported. Server Response Time defines the time how long device will wait for response from server before device denies the connection between FMB630 and server. Server 2 is used as duplicated server (not back up server). Some operators use specific authentication for GPRS session - CHAP or PAP. If any of these is used, APN should be entered as 'chap:<APN>' or 'pap:<APN>'. I.e. if operator is using APN 'internet' with CHAP authentication, it should be entered as 'chap:internet'. Information about APN and authentication type should be provided by your GSM operator.

System	GPRS data sending Settings	
GSM	Server #1 Settings	
> GPRS	GPRS Context Activation	Enable
> GPRS Limits	Protocol	TCP
> SMS Security	Domain:	<input type="text"/>
> SMS Data	Target Server Port:	0
> SMS Events Numbers	Server #2 Settings	
> SMS Events	GPRS Context Activation	Disable
> Operator list	Protocol	TCP
Features	Domain:	<input type="text"/>
CAN	Target Server Port:	0
	Server Response Timeout	30 sec