

# FM962 SMS/GPRS Commands

[Main Page](#) > [EOL Products](#) > [FMB962](#) > [FMB962 Manual](#) > **FM962 SMS/GPRS Commands**

## Commands apply for these devices:

[FMB001](#) [FMB010](#) [FMB002](#) [FMB020](#) [FMB003](#) [FMB110](#) [FMB120](#) [FMB122](#) [FMB125](#) [FMB130](#) [FMB202](#) [FMB204](#) [FMB208](#) [FMB900](#) [FMB920](#) [FMB962](#) [FMB964](#) [FM3001](#) [FMT100](#) [FMC001](#) [FMC003](#) [FMC00A](#) [FMM001](#) [FMM003](#) [FMM00A](#) [FMC125](#) [FMC130](#) [FMM125](#) [FMM130](#) [FMU125](#) [FMU126](#) [FMU130](#) [MTB100](#) [FMB140](#)

All commands are case sensitive. When user tries to send SMS/GPRS message to device that operates in Deep Sleep mode, it cannot arrive to it because the GSM/GPRS module is disabled most of the time. Device will receive the SMS message when it exits Deep Sleep mode, but GPRS commands will not be received after exiting Deep Sleep Mode.

If the device is in GPS Sleep or Online Deep Sleep mode, sent SMS/GPRS message will arrive to the device.

SMS command structure:

<SMS login><space><SMS password><space><command><space><value>

SMS command [getinfo](#) example:

- If you have set SMS login and password: login pass getinfo
- If SMS login and password are not set leave two spaces before command: getinfo

GPRS commands require [Codec 12](#) protocol.

□

## Contents

- [1 Commands apply for these devices:](#)
- [2 Common commands](#)
- [3 Bluetooth Commands](#)
- [4 Commands Related to Features](#)
- [5 OBD Commands](#)
- [6 CAN Adapter Commands](#)

To search for compatible products, [Expand all content](#)

## Common commands

---

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

<a href="#">getinfo</a>	Device runtime system information.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">getver</a>	Returns code version, device IMEI, modem app version, RTC time, Init time, Uptime and BT MAC address.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">getstatus</a>	Modem Status information.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands

<a href="#">getgps</a>	Current GPS data, date and time.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
<a href="#">getio</a>	Readout analog input,digital input and output.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
<a href="#">gps</a>	Returns location information with Google maps link.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

<a href="#">radio #</a>	Returns IO status, # AVL ID.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">cpureset</a>	Resets device	No	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">fwstats</a>	Get data about FW and restarts	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands

<a href="#">getrecord</a>	SMS command initiates saving and sending of high priority record.	No	<p>FMBXXX  FMB001  FMC001  FMB010  FMB110  FMB120  FMB122  FMB125  FMB130  FMB140  FMB150  FMC150  FMM150  FMB900  FMB920  FMB202  FMB204  FMB206  FMT100  FMP100  FMC001  FMC125  FMC130  FMM001  FMM125  FMM130  FMC800  FMM800  FMM80A  FMC880  FMM880  FMC250</p> <p>FMBXXX  FMB001  FMC001  FMB010  FMB110  FMB120  FMB122  FMB125  FMB130  FMB140  FMB150  FMC150  FMM150  FMB900  FMB920  FMB202  FMB204  FMB206  FMT100  FMP100  FMC001  FMC125  FMC130  FMM001  FMM125  FMM130  FMC800  FMM800  FMM80A  FMC880  FMM880  FMC250</p>	Common commands
<a href="#">getimeiccid #</a>	Response is sent to SMS/GPRS command sender and also to GSM number provided. # - GSM number using international format e.g. 37069012345	Yes	<p>FMBXXX  FMB001  FMC001  FMB010  FMB110  FMB120  FMB122  FMB125  FMB130  FMB140  FMB150  FMC150  FMM150  FMB900  FMB920  FMB202  FMB204  FMB206  FMT100  FMP100  FMC001  FMC125  FMC130  FMM001  FMM125  FMM130  FMC800  FMM800  FMM80A  FMC880  FMM880  FMC250</p> <p>FMBXXX  FMB001  FMC001  FMB010  FMB110  FMB120  FMB122  FMB125  FMB130  FMB140  FMB150  FMC150  FMM150  FMB900  FMB920  FMB202  FMB204  FMB206  FMT100  FMP100  FMC001  FMC125  FMC130  FMM001  FMM125  FMM130  FMC800  FMM800  FMM80A  FMC880  FMM880  FMC250</p>	Common commands
<a href="#">getimsi</a>	Sends the IMSI number of the SIM card inserted as a response to the sender.  If two SIM cards are inserted in the device, the response will be the IMSI number of the currently active SIM card.  <b>Note: This command is supported from 03.10.02 firmware version.</b>	Yes	<p>FMBXXX  FMB001  FMC001  FMB010  FMB110  FMB120  FMB122  FMB125  FMB130  FMB140  FMB150  FMC150  FMM150  FMB900  FMB920  FMB202  FMB204  FMB206  FMT100  FMP100  FMC001  FMC125  FMC130  FMM001  FMM125  FMM130  FMC800  FMM800  FMM80A  FMC880  FMM880  FMC250</p> <p>FMBXXX  FMB001  FMC001  FMB010  FMB110  FMB120  FMB122  FMB125  FMB130  FMB140  FMB150  FMC150  FMM150  FMB900  FMB920  FMB202  FMB204  FMB206  FMT100  FMP100  FMC001  FMC125  FMC130  FMM001  FMM125  FMM130  FMC800  FMM800  FMM80A  FMC880  FMM880  FMC250</p>	Common commands

<a href="#">getops</a>	Returns list of all currently visible operators.	Yes	FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
<a href="#">allver</a>	Responds with information about hardware and firmware versions and storage space	Yes	FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
<a href="#">getparam #</a>	Returns selected parameter value. # - first <a href="#">ID value</a> . # - second <a href="#">ID value</a> . # - third <a href="#">ID value</a> . SMS command is limited to 160 characters.	Yes	FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
<a href="#">getparam #;#;#...</a>			FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	

<a href="#">setparam</a> #:#	Sets selected parameter value [Parameter ID] : [New Parameter Value] ; [Parameter ID] : [New Parameter Value]... SMS command is limited to 160 characters.	Yes	Common commands	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>
<a href="#">flush</a> #, #, #, #, #, #, #	Redirects device to other server. 1.# - IMEI. 2.# - APN. 3.# - LOGIN. 4.# - PASS. 5.# - IP. 6.# - PORT. 7.# - MODE (0-TCP/1-UDP).	Yes	Common commands	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>
<a href="#">countrecs</a>	Returns records number.	Yes	Common commands	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>



<a href="#">battery</a>	Returns battery state info.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMM001</a> <a href="#">FMB002</a> <a href="#">FMB003</a> <a href="#">FMB010</a> <a href="#">FMB020</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB910</a> <a href="#">FMB920</a> <a href="#">FMB962</a> <a href="#">FMB964</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB208</a> <a href="#">FMB209</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMU125</a> <a href="#">FMU126</a> <a href="#">EMC130</a> <a href="#">FMM130</a> <a href="#">FMU130</a> <a href="#">MSP500</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">wdlog</a>	Returns all information about 'watch dogs'	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">defaultcfg</a>	Load default configuration.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands

			<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">EMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	
<a href="#">setkey</a> # #	<p>Add new or change current configuration keyword. If device is locked, keyword cannot be changed.</p> <p>1.# - old keyword (if adding new keyword space).  2.# - new keyword.</p>	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">EMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">delkey</a> #	<p>Remove existing keyword (If device is locked, keyword cannot be changed).</p> <p># - old keyword.</p>	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">EMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands
<a href="#">bbread</a> #	<p>Return black box information (HEX value of event ID and HEX value of custom data field (optional)).</p> <p># - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.</p>	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">EMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Common commands

<a href="#">bbinfo</a> #	Return same information as bbread command but additional all events timestamp is written in HEX. # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
<a href="#">sdformat</a>	Format SD card.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

## Bluetooth Commands

Command	Description	Response	HW Support	Parameter Group
<a href="#">btgetlist</a> #	Returns requested Bluetooth list. # - 0,1 or 2 (0 - Discovered, 1 - Paired, 2 - Connected, 3 - Discovered BT4/BLE devices).	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Bluetooth commands

<i>btscan</i>	Starts Bluetooth scan.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Bluetooth commands
<i>btvisible #</i>	Sets Bluetooth to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Bluetooth commands
<i>btrelease #</i>	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Bluetooth commands

<i>btunpair #</i>	Unpair Bluetooth device. # - all, BT address (all - unpair all devices, BT address - unpair only specified MAC address).	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Bluetooth commands
-------------------	---	-----	---	--------------------

## Commands Related to Features

---

[FMBXXX FMB001](#)

- [FMC001](#)
- [FMB010](#)
- [FMB110](#)
- [FMB120](#)
- [FMB122](#)
- [FMB125](#)
- [FMB130](#)
- [FMB140](#)
- [FMB150](#)
- [FMC150](#)
- [FMM150](#)
- [FMB900](#)
- [FMB920](#)
- [FMB202](#)
- [FMB204](#)
- [FMB206](#)
- [FMT100](#)
- [FMP100](#)
- [FMC001](#)
- [FMC125](#)
- [FMC130](#)
- [FMM001](#)
- [FMM125](#)
- [FMM130](#)
- [FMC800](#)
- [FMM800](#)
- [FMM80A](#)
- [FMC880](#)
- [FMM880](#)
- [FMC250](#)

Command	Description	Response	HW Support	Parameter Group
<a href="#">fc_reset</a>	Resets fuel consumption parameters.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Commands related to features
<a href="#">towingreact</a>	Towing reactivation.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Commands related to features
<a href="#">auto_calibrate:get</a>	Returns the state of calibration.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Commands related to features
<a href="#">odomet:#</a>	Set total odometer value. # - new odometer value in km.	Yes	<a href="#">FMBXXX FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	Commands related to features

<a href="#">odoget</a>	Display current odometer value.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
<a href="#">go2sleep</a>	Puts device to sleep ignoring going to sleep condition and stays asleep for the set time. <b>Note: This command is supported from 03.27.10.Rev.482 firmware version.</b>	Yes	FMB965 FMB930	Commands related to features
<a href="#">on_demand_trackingX</a>	X=0 - Stops Tracking on Demand functionality. X=1 - Starts Tracking on Demand functionality. X=2 - Generates one high priority record and initiates data sending to server. <b>Note: This command is supported from 03.25.06 firmware version.</b>	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features

## OBD Commands

Command	Description	Response	HW Support	Parameter Group
<a href="#">obdinfo</a>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all available information from OBD.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands

<a href="#">faultcodes</a>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all visible fault codes.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	OBD Commands
<i>cleardtc</i>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Command clears all vehicle stored fault codes.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a> <a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	OBD Commands
<i>getvin</i>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays vehicle VIN code.	Yes	<a href="#">FMBXXX</a> <a href="#">FMB001</a> <a href="#">FMC001</a> <a href="#">FMB010</a> <a href="#">FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMB130</a> <a href="#">FMB140</a> <a href="#">FMB150</a> <a href="#">FMC150</a> <a href="#">FMM150</a> <a href="#">FMB900</a> <a href="#">FMB920</a> <a href="#">FMB202</a> <a href="#">FMB204</a> <a href="#">FMB206</a> <a href="#">FMT100</a> <a href="#">FMP100</a> <a href="#">FMC001</a> <a href="#">FMC125</a> <a href="#">FMC130</a> <a href="#">FMM001</a> <a href="#">FMM125</a> <a href="#">FMM130</a> <a href="#">FMC800</a> <a href="#">FMM800</a> <a href="#">FMM80A</a> <a href="#">FMC880</a> <a href="#">FMM880</a> <a href="#">FMC250</a>	OBD Commands

## CAN Adapter Commands

}}}

Command

Description

Response

HW Support

Parameter Group

<a href="#">lvcansetprog #</a>	Set program number to CAN Adapter # - three to five digit vehicle specific number	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcangetprog</a>	Get program number from CAN Adapter	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcangetinfo</a>	Get information about connected CAN adapter	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcansimpletacho #</a>	Add or remove simpletacho start byte. # - 0 or 1 (0 - don't add start byte, 1 - add start byte).	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanclear #</a>	Clear Total Mileage (counted), Engine Work Time (counted), Fuel Consumed (counted) parameters values. # - parameter (0 - Engine work time (counted), 1 - Fuel Consumed (counted), 2 - Vehicle Mileage (counted)).	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanfaultcodes</a>	Read DTC fault codes.	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanopenalldoors</a>	Toggle CAN-CONTROL to open [unlock] all doors	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanclosealldoors</a>	Toggle CAN-CONTROL to close [lock] all doors	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanopentruck</a>	Toggle CAN-CONTROL to open [unlock] trunk	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanblockengine</a>	Toggle CAN-CONTROL to block vehicle engine (if command is <b>not</b> supported, please, visit <a href="#">FAQ</a> )	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMU125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMU130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands

<a href="#">lvcannunblockengine</a>	Toggle CAN-CONTROL to unblock vehicle engine (if command is <b>not</b> supported, please, visit <a href="#">FAQ</a> )	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMM125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMM130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanturninglights</a>	Toggle CAN-CONTROL to flash lights One flash of all turn lights ordered through accidental / blinking turn light switch	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMM125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMM130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcanhorn</a>	Toggle CAN-CONTROL to activate single horn sound	Yes	<a href="#">FMBXXX FMB110</a> <a href="#">FMB120</a> <a href="#">FMB122</a> <a href="#">FMB125</a> <a href="#">FMM125</a> <a href="#">FMC125</a> <a href="#">FMM125</a> <a href="#">FMB130</a> <a href="#">FMM130</a> <a href="#">FMC130</a> <a href="#">FMM130</a>	CAN Adapter Commands
<a href="#">lvcansetting#,#</a>	<p>This command is used to set specific counters for vehicles. From that moment of setting the value, vehicle will continue to count from the specified value.</p> <p>1.#:  0 - setting total engine work time (seconds)  1 - setting total mileage of the vehicle (km)  2 - resetting total fuel consumption to 0 is available (liters)  3 - setting total CNG use (kg)  4 - setting electric engine work time (seconds)  5 - setting wheel speed sensor impulses (impulses)  2.# - value(0 to 0xFFFFFFFF or ? (? - is used to get the current setting value))</p> <p><b>Note: This command is supported from 03.25.15.Rev.145 firmware version.</b></p>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands
<a href="#">lvcanrefresh</a>	<p>This command forces FMB1YX connection to FOTA WEB to report current CAN adapter status.</p> <p><b>Note: This command is supported from 03.25.16.Rev.281 firmware version.</b></p>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands
<a href="#">lvcanreset</a>	<p>This command forces CAN adapter reset.</p> <p><b>Note: This command is supported from 03.25.16.Rev.281 firmware version.</b></p>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands
<a href="#">lvcancheck</a>	<p>This command reports CAN lines connection information.</p> <p><b>Note: This command is supported from 03.25.16.Rev.281 firmware version.</b></p>	Yes	<a href="#">FMB140</a>	CAN Adapter Commands