

FMA110 LED status

[Main Page](#) > [EOL Products](#) > [FMA110](#) > [FMA110 Manual](#) > **FMA110 LED status**

Navigation LED Indications

Behaviour	Meaning
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sleep mode

Status LED Indications

Behaviour	Meaning
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Blinking fast constantly	Boot mode
Off	Device is not working or Device is in boot mode