

FMA110 LED status

[Main Page](#) > [EOL Products](#) > [FMA110](#) > [FMA110 Manual](#) > **FMA110 LED status**

Navigation LED Indications

| Behaviour | Meaning |
|-------------------------|---|
| Permanently switched on | GNSS signal is not received |
| Blinking every second | Normal mode, GNSS is working |
| Off | GNSS is turned off because: Device is not working or Device is in sleep mode |

Status LED Indications

| Behaviour | Meaning |
|--------------------------------|---|
| Blinking every second | Normal mode |
| Blinking every two seconds | Sleep mode |
| Blinking fast for a short time | Modem activity |
| Blinking fast constantly | Boot mode |
| Off | Device is not working or Device is in boot mode |