

# FMA204 GSM settings, GPRS part

[Main Page](#) > [EOL Products](#) > [FMA204](#) > [FMA204 Configuration](#) > **FMA204 GSM settings, GPRS part**

**GPRS** defines main parameters for FMA204: GSM operator APN and GPRS username and password (optional - depending on the operator), destination server IP and port, and allows to set protocol used for data transfers - TCP or UDP.

Some operators use specific authentication for GPRS session - CHAP or PAP. If any of these is used, APN should be entered as 'chap:<APN>' or 'pap:<APN>'. I.e. if the operator is using APN 'internet' with CHAP authentication, it should be entered as 'chap:internet'. Information about APN and authentication type should be provided by your GSM operator.

<b>System</b>	GPRS data sending Settings	
<b>Records</b>	GPRS Context Activation	Enabled
<b>GSM</b>	Protocol	TCP
> GPRS	Always Online	Disabled
> SMS	APN:	GSM provider APN
> SMS Events	APN user name:	
	APN password:	
	Domain:	127.0.0.1
	Target Server Port:	65535