FMA204 LED status

 $\underline{\text{Main Page}} > \underline{\text{FOL Products}} > \underline{\text{FMA204}} > \underline{\text{FMA204 Manual}} > \underline{\text{FMA204 LED status}}$

This section is an explanation of LED indications on an FMA204 device.

Navigation LED Indications

Behaviour	Meaning
Permanently switched on	GPS signal is not received
Blinking every second	Normal mode, GPS is working
Off	GPS is turned off because: Deep sleep mode
	or GPS antenna short circuited

Status LED Indications

Behaviour	Meaning
Blinking every second	Normal mode
Blinking every two seconds	Deep Sleep mode
Blinking fast for a short time	Modem activity
Blinking fast constantly	Boot mode
Off	Device is not working
	or Device firmware being flashed