## **FMA2 setparam 1271 X/212 X**

If # is from 0 to 49 , # means index of operator code which has to be configured. Up to 20 operator codes may be configured in 1 SMS. Example: "setparam  $16\ 24602,24603,24605$ ", here 16th, 17th and 18th operator codes are set. Note! Other operator codes are left unchanged in the configuration.