

[https://wiki.teltonika-gps.com/view/FMA\\_dtcinfo](https://wiki.teltonika-gps.com/view/FMA_dtcinfo)

## **FMA dtcinfo**

Command dtcinfo gives DTC information

### **“DTC information” possible answers:**

- Ignition is off (DTC reading is not possible);
- DTC not supported by the program/compilation;
- Communication error;
- Communication error -diagnostic computer connected;
- Communication error -engine is working;

Module detects # DTC error codes (# -Number of DTC codes)