FMA dtcinfo

Command dtcinfo gives DTC information

"DTC information" possible answers:

- Ignition is off (DTC reading is not possible);
- DTC not supported by the program/compilation;
- Communication error;
- Communication error -diagnostic computer connected;
- Communication error -engine is working;

Module detects # DTC error codes (# -Number of DTC codes)