

## FMA flush

### flush #,#,#,#,#,#,#

Initiates all data sending by GPRS to specified target server. Comma separated parameters go as numbered:

1.# - IMEI

2.# - APN

3.# - GPRS LOGIN

4.# - GPRS PASSWORD

5.# - IP

6.# - PORT

7.# - MODE (0-TCP/1-UDP)

Parameters are separated by comma (no spaces needed). In case you don't need to enter parameter (Login/Pass) - do not put space, simply put comma and write next parameter.

**Example:** "flush 353976012555151,APNName,APNLogin,APNPassword,212.47.99.62,12050,0"

Response details	Description
<b>FLUSH SMS Accepted</b>	FLUSH SMS Accepted.
<b># records found on FLASH</b>	Number of records found on FLASH.
<b>Minimum Records to Send: #</b>	Number of minimum saved records to send.
<b>GPRS Enabled: #</b>	State of the GPRS connection, 0 - disabled; 1 - enabled.
<b>Time Sync: #</b>	Indicates time synchronization on the device, 0 - not synchronized; 1 - synchronized.

**Example:** "FLUSH SMS Accepted. 11 records found on FLASH. Minimum Records to Send: 1. GPRS Enabled: 1. Time Sync: 1"