

https://wiki.teltonika-gps.com/view/FMA_getparam

FMA getparam

Read parameter value. ID consists of 3 or 5 digits. A detailed list of parameters and identifiers can be found [here](#).

Example:

"getparam 1115" command will request server IP address."