

[https://wiki.teltonika-gps.com/view/FMA\\_getparam\\_1271\\_X/212\\_X](https://wiki.teltonika-gps.com/view/FMA_getparam_1271_X/212_X)

## **FMA getparam 1271 X/212 X**

X values can be 1,2,3..

If X = 1, Operator codes from 0-19 are read from configuration and sent via SMS.

If X = 2, Operator codes from 20-39 are read from configuration and sent via SMS.

If X = 3, Operator codes from 40-49 are read from configuration and sent via SMS.

If X = any other, Operator codes from 0-19 are read from configuration and sent via SMS.