FMA getweektime

Example:

"Clock Sync: 1 DOW: 4 Time 12:58 Weektime: 6538"

Response details	Description
Clock Sync	Indicates system clock synchronization status. 0 – System is not synchronized, 1 – System synchronized.
DOW	Day Of Week - indicates current day of week starting from 1 - Monday, 2 - Tuesday, etc.
Time	Indicates current GMT time
WeekTime	Indicates time in minutes starting from Monday 00:00 GMT.