

[https://wiki.teltonika-gps.com/view/FMA\\_getweektime](https://wiki.teltonika-gps.com/view/FMA_getweektime)

# FMA getweektime

Example:

"Clock Sync: 1 DOW: 4 Time 12:58 Weektime: 6538"

<b>Response details</b>	<b>Description</b>
<b>Clock Sync</b>	Indicates system clock synchronization status. 0 - System is not synchronized, 1 - System synchronized.
<b>DOW</b>	Day Of Week - indicates current day of week starting from 1 - Monday, 2 - Tuesday, etc.
<b>Time</b>	Indicates current GMT time
<b>WeekTime</b>	Indicates time in minutes starting from Monday 00:00 GMT.