

[https://wiki.teltonika-gps.com/view/FMA\\_getweektime](https://wiki.teltonika-gps.com/view/FMA_getweektime)

# FMA getweektime

Example:

"Clock Sync: 1 DOW: 4 Time 12:58 Weektime: 6538"

Response details	Description
<b>Clock Sync</b>	Indicates system clock synchronization status. 0 – System is not synchronized, 1 – System synchronized.
<b>DOW</b>	Day Of Week – indicates current day of week starting from 1 – Monday, 2 – Tuesday, etc.
<b>Time</b>	Indicates current GMT time
<b>WeekTime</b>	Indicates time in minutes starting from Monday 00:00 GMT.