

[https://wiki.teltonika-gps.com/view/FMA\\_setacc](https://wiki.teltonika-gps.com/view/FMA_setacc)

## **FMA setacc**

This command is used to manually calibrate current coordinates of the device. It is useful to use it with Eco driving. Device must be mounted using the mounting recommendations whose are provided 10.1.5 on this document, otherwise command won't have an effect.