

[https://wiki.teltonika-gps.com/view/FMA\\_setkey](https://wiki.teltonika-gps.com/view/FMA_setkey)

## FMA setkey

### **setkey # #**

Changes device current configuration keyword.

**Example:** "opa opa setkey 0101 3333"

*Here 0101 is an old keyword, 3333 is a new keyword.*

If the keyword was not set, new keyword can be set using the same command.

**Example:** "opa opa setkey 3333"

*Here 3333 is a new keyword.*