

https://wiki.teltonika-gps.com/view/FMA_setkey

FMA setkey

setkey #

Changes device current configuration keyword.

Example: "opa opa setkey 0101 3333"

Here 0101 is an old keyword, 3333 is a new keyword.

If the keyword was not set, new keyword can be set using the same command.

Example: "opa opa setkey 3333"

Here 3333 is a new keyword.