

[https://wiki.teltonika-gps.com/view/FMA\\_sn](https://wiki.teltonika-gps.com/view/FMA_sn)

## **FMA sn**

### **sn #**

Enables or disables Static navigation. 1 - enable, 0 - disable.