

FMB002 Security info

[Main Page](#) > [OBD Trackers](#) > [FMB002](#) > [FMB002 Configuration](#) > **FMB002 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB002 Security info web interface. The interface is divided into a sidebar on the left and a main content area. The sidebar contains a list of navigation options: Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II. The main content area is titled 'Device Info' and contains several sections. At the top, there are buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. Below these buttons, there is a header for 'Device Info' with a document icon. The 'Device Info' section contains the following data: Device Name (redacted), Last Start Time (31/12/2003 06:00:18 p. m.), Power Voltage (17105 mV), Ext Storage (used/total) (0 / 122 MB), and Battery Voltage (0 mV). Below this, there is a 'Format' button. The next row shows Firmware Version (03.25.15 Rev: 1.0), RTC Time (31/12/2003 06:01:05 p. m.), Device IMEI (35663300001000), Device Uptime (00:00:47), and Internal Battery Status (Not Charging 0%). Below the 'Device Info' section, there are four tabs: 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' tab is selected and shows the following data: GNSS Status (Module Status ON, GNSS Packets 32, Fix Status No fix, Fix Time 00:00:00), Satellites (Visible: GPS 4, GLONASS 0, BeiDou 0, Galileo 0; In Use: GPS 0, GLONASS 0, BeiDou 0, Galileo 0; Total In View 4, Total In Use 0), and Location (Latitude/Longitude 0,0, Altitude 0, HDOP 0, Speed 0 km/h, Angle 0°, PDOP 0). The bottom of the interface features a blue bar with social media icons (Facebook, YouTube, Twitter, Instagram, LinkedIn, WhatsApp) and a gear icon for settings.

*Please note that This feature will only show up in configurator when device is connected to a computer.