

FMB003 Security info

[Main Page](#) > [OBD Trackers](#) > [FMB003](#) > [FMB003 Configuration](#) > **FMB003 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB003 Security info web interface. The interface is divided into a sidebar on the left and a main content area. The sidebar contains a list of navigation options: Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II. The main content area is titled 'Device Info' and contains several sections. At the top, there are buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. Below these buttons, there is a header for 'Device Info' with a document icon. The main content area is divided into several sections: 'Device Info' (Device Name, Last Start Time, Power Voltage, Ext Storage, Battery Voltage, Firmware Version, RTC Time, Device IMEI, Device Uptime, Internal Battery Status), 'GNSS Info' (GNSS Status, GNSS Packets, Fix Status, Fix Time), 'Satellites' (Visible: GPS, GLONASS, BeiDou, Galileo; In Use: GPS, GLONASS, BeiDou, Galileo; Total In View, Total In Use), and 'Location' (Latitude/Longitude, Altitude, HDOP, Speed, Angle, PDOP). The top right corner of the interface shows the IMEI, FW 03.25.15 Rev: 1.0, and Configuration 6.1.17.0. The bottom of the interface features social media icons and a gear icon for settings.

*Please note that This feature will only show up in configurator when device is connected to a computer.