

# FMB010 Parameter list

[Main Page](#) > [Fast & Easy Trackers](#) > [FMB010](#) > [FMB010 Manual](#) > **FMB010 Parameter list**

□

## Contents

- [1 System parameters](#)
- [2 GPRS parameters](#)
- [3 SMS/Call settings](#)
- [4 GSM operators](#)
- [5 Data acquisition mode parameters](#)
  - [5.1 Home Network GSM operator code "Vehicle on STOP" parameters](#)
  - [5.2 Home Network GSM operator code "Vehicle MOVING" parameters](#)
  - [5.3 Roaming Network GSM operator code "Vehicle on STOP" parameters](#)
  - [5.4 Roaming Network GSM operator code "Vehicle MOVING" parameters](#)
  - [5.5 Unknown Network GSM operator code "Vehicle on STOP" parameters](#)
  - [5.6 Unknown Network GSM operator code "Vehicle MOVING" parameters](#)
- [6 Features parameters](#)
  - [6.1 Green driving parameters](#)
  - [6.2 Overspeeding scenario parameters](#)
  - [6.3 Jamming scenario parameters](#)
- [7 Trip/Odometer](#)
  - [7.1 Trip scenario parameters](#)
  - [7.2 Advanced trip scenario parameters](#)
  - [7.3 Odometer parameters](#)
- [8 Accelerometer features](#)
  - [8.1 Unplug Detection](#)
  - [8.2 Towing Detection](#)
  - [8.3 Crash Detection](#)
  - [8.4 Excessive Idling](#)
- [9 AutoGeofencing scenario parameters](#)
- [10 Manual Geofence](#)
- [11 Bluetooth](#)
- [12 Bluetooth 4.0](#)
  - [12.1 Common Settings](#)
  - [12.2 BLE functionalities Connection #1](#)
  - [12.3 BLE functionalities Connection #2](#)
  - [12.4 BLE functionalities Connection #3](#)
  - [12.5 BLE functionalities Connection #4](#)
- [13 Beacon List Parameters](#)
- [14 Tracking on Demand](#)
- [15 I/O parameters](#)
- [16 OBD II \(Bluetooth\)](#)

# System parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
138	Uint8	0	0	2	1 - Ignition 2 - Movement 4 - GPS	Movement source
106	Uint8	1	0	1	0 - Disable 1 - Enable	Static navigation
112	Uint8	1	0	1	1 - Movement 2 - Ignition 3 - Movement and Ignition	Static navigation source
107	Uint8	2	0	2	0 - After Position Fix 1 - Always 2 - After Time Sync	Send/Save records without TS
108	Uint8	1	0	1	0 - Disable 1 - Enable	LED Indication
109	Uint8	10	1	15	0 - Undefined 1 - Beidou only 2 - Glonass only 3 - Glonass and Beidou not allowed 4 - Galileo only 5 - Galileo and Beidou 6 - Galileo and Glonass 7 - Galileo, Glonass and Beidou not allowed 8 - Gps only 9 - Gps and Beidou 10 - Gps and Glonass 11 - Gps, Glonass and Beidou not allowed 12 - Gps and Galileo 13 - Gps, Galileo and Beidou 14 - Gps, Galileo and Glonass 15 - Gps, Galileo, Glonass and Beidou and not allowed	GNSS source
110	Uint8	0	0	1	0 - On need 1 - After ignition on	Battery charge mode
113	Uint8	0	0	1	0 - Codec 8 1 - Codec 8 Extended	Protocol Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
102	Uint8	2	0	2	0 - Disable 1 - Gps sleep 2 - Deep sleep 3 - Online Deep sleep 4 - Ultra sleep	Sleep settings
103	Uint16	1	1	3000	Minutes	Timeout

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>101</b>	Uint8	4	1	14	2 - Accelerometer 3 - Digital Input or Accelerometer 4 - Power Voltage 5 - Digital Input or Power Voltage 6 - Accelerometer or Power Voltage 7 - Digital Input, Accelerometer, or Power Voltage 8 - Engine RPM 9 - Digital Input or Engine RPM 10 - Accelerometer or Engine RPM 11 - Digital Input, Accelerometer or Engine RPM 12 - Power Voltage or Engine RPM 13 - Digital Input, Power Voltage or Engine RPM 14 - Accelerometer, Power Voltage or Engine RPM	Ignition settings
<b>104</b>	Uint16	30000	0	30000	mV	High voltage
<b>105</b>	Uint16	13200	0	29999	mV	Low voltage
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>19001</b>	Uint16	5	1	60	Seconds	Movement Start Delay
<b>19002</b>	Uint16	60	5	300	Seconds	Movement Stop Delay
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>900</b>	Uint8	1	0	3	0 - Gps only 1 - NITZ and NTP 2 - NTP 3 - NITZ	Synchronization settings
<b>901</b>	Uint8	0	0	24	Hours	NTP Resync
<b>902</b>	Char	"avl1.teltonika.lt"	0	55	String	NTP server 1
<b>903</b>	Char	"pool.ntp.org"	0	55	String	NTP server 2
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>169</b>	Uint8	2	0	2	0 - Disabled 1 - Once 2 - Continuous	Accelerometer Auto Calibration
<b>170</b>	Uint8	1	0	1	0 - Disabled 1 - Enabled	Gravity Filter

## GPRS parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1000</b>	Uint32	5	0	259200	Seconds	Open link timeout
<b>1001</b>	Uint16	30	5	300	Seconds	Response timeout

**1002**      Uint8      0      0      1      0 - Newest  
1 - Oldest      Sort by

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2000</b>	Uint8	1	0	1	0 - Disable 1 - Enable	GPRS context
<b>2001</b>	Char	""	0	32	String	APN
<b>2002</b>	Char	""	0	32	String	APN username
<b>2003</b>	Char	""	0	32	String	APN password
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2004</b>	Char	""	0	55	String	Domain
<b>2005</b>	Uint16	0	0	65535	Number	Port
<b>2006</b>	Uint8	1	0	1	0 - TCP 1 - UDP	Protocol
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2010</b>	Uint8	0	0	2	0 - Disable 1 - Backup 2 - Duplicate	Backup Server Mode
<b>2007</b>	Char	""	0	55	String	Backup Server Domain
<b>2008</b>	Uint16	0	0	65535	Number	Backup Server Port
<b>2009</b>	Uint8	0	0	1	0 - TCP 1 - UDP	Backup Server Protocol
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>13003</b>	Uint8	1	0	1	0 - Disable 1 - Enable	FOTA WEB Status
<b>13000</b>	Char	fm.teltonika.lt	0	55	String	FOTA WEB Domain
<b>13001</b>	Uint16	5000	0	65535	Number	FOTA WEB Port
<b>13002</b>	Uint16	720	30	65535	Number	FOTA WEB Period

## SMS/Call settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>3000</b>	Uint8	0	0	1	0 - Disable 1 - Enable	Allow SMS data sending
<b>3001</b>	Char	""	0	16	String	Data Send Number
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>3003</b>	Char	""	0	5	String	Login
<b>3004</b>	Char	""	0	5	String	Password
<b>3006</b>	Uint16	UTC+00:00	UTC-12:00 UTC+13:00		Time zone	SMS event Time Zone
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>3005</b>	Uint8	0	0	4	0 - Do nothing 1 - Hangup 2 - Report position	Incoming call action
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>4000-4199</b>	Char	""	0	16	String	Authorized number
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>6000-6009</b>	Char	""	0	16	String	Predefined number

# GSM operators

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
5000-5049	Uint32	0	0	999999	Number	SIM roaming operator list
5500-5549	Uint32	0	0	999999	Number	Operator blacklist

## Data acquisition mode parameters

### Home Network GSM operator code "Vehicle on STOP" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
10000	Uint16	3600	0	65535	Min Period
10004	Uint8	1	1	255	Min Saved Records
10005	Uint16	120	0	65535	Send Period

### Home Network GSM operator code "Vehicle MOVING" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
10050	Uint16	300	0	65535	Min Period
10051	Uint16	100	0	65535	Min Distance
10052	Uint8	10	0	180	Min Angle
10053	Uint8	10	0	100	Min Speed Delta
10054	Uint8	1	1	255	Min Saved Records
10055	Uint16	120	0	65535	Send Period

### Roaming Network GSM operator code "Vehicle on STOP" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
10100	Uint16	3600	0	65535	Min Period
10104	Uint8	1	1	255	Min Saved Records
10105	Uint16	0	0	65535	Send Period

### Roaming Network GSM operator code "Vehicle MOVING" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
10150	Uint16	300	0	65535	Min Period
10151	Uint16	100	0	65535	Min Distance
10152	Uint8	10	0	180	Min Angle
10153	Uint8	10	0	100	Min Speed Delta
10154	Uint8	1	1	255	Min Saved Records
10155	Uint16	0	0	65535	Send Period

## Unknown Network GSM operator code "Vehicle on STOP" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
10200	Uint16	3600	0	65535	Min Period
10204	Uint8	1	1	255	Min Saved Records
10205	Uint16	120	0	65535	Send Period

## Unknown Network GSM operator code "Vehicle MOVING" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
10250	Uint16	300	0	65535	Min Period
10251	Uint16	100	0	65535	Min Distance
10252	Uint8	10	0	180	Min Angle
10253	Uint8	10	0	100	Min Speed Delta
10254	Uint8	1	1	255	Min Saved Records
10255	Uint16	0	0	65535	Send Period

## Features parameters

### Green driving parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11000	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
11004	Uint8	2.5	0.5	10	m/s <sup>2</sup>	Max acceleration
11005	Uint8	2.7	0.5	10	m/s <sup>2</sup>	Max braking
11006	Uint8	3.4	0.5	10	m/s <sup>2</sup>	Max cornering
11007	Uint8	0	0	1	0 - GPS 1 - Accelerometer	Source
11008	uint8	0	0	1	Enable/Disable	Duration
11003	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT 1 2 - DOUT 2	Output control
11001	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
11002	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
7034	Uint8	0	0	10	Phone number	Send SMS to
8034	String	"Green Driving"	0	160	Text	Sms text

### Overspeeding scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		

<b>11100</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
<b>11104</b>	Uint16	90	0	260	km/h	Max speed
<b>11103</b>	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT 1 2 - DOUT 2	Output control
<b>11101</b>	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
<b>11102</b>	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
<b>7032</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8032</b>	String	"Overspeeding"	0	160	Text	Sms text

## Jamming scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11300</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
<b>11303</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11304</b>	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT1 2 - DOUT2	Output control
<b>11301</b>	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
<b>11302</b>	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
<b>11305</b>	Uint16	60	0	65535	Seconds	Timeout

## Trip/Odometer

### Trip scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11800</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
<b>11801</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11802</b>	Uint8	0	0	1	0 - Continuous 1 - Between records	Mode
<b>11803</b>	Uint8	5	0	255	km/h	Start speed
<b>11804</b>	Uint16	60	0	65535	Seconds	Ignition off timeout
<b>7031</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8031</b>	String	"Trip"	0	160	Text	Sms text

### Advanced trip scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>700</b>	Uint16	100	0	65535	0 - Disable	Eco score allowed events

<b>11805</b>	Uint8	0	0	1	0 - Disable 1 - Enable	Remember iButton
--------------	-------	---	---	---	---------------------------	------------------

## Odometer parameters

---

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11806</b>	Uint8	0	0	2	0 - GNSS 1 - OBD 2 - LVCAN	Calculation source
<b>11807</b>	Uint32	0	0	4294967	Kilometer	Odometer Value

## Accelerometer features

### Unplug Detection

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11500</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario setting
<b>11501</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11502</b>	Uint8	1	0	1	0 - Simple 1 - Advanced	Detection mode
<b>7036</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8036</b>	String	"Unplug"	0	160	Text	Sms text

### Towing Detection

---

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11600</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Priority
<b>11601</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11602</b>	Uint16	5	0	65535	Minutes	Activation timeout
<b>11603</b>	Uint8	0	0	60	Seconds	Event timeout
<b>11604</b>	Uint8	0	0	10	Phone number	Make call to
<b>11605</b>	Double	0.22	0.1	5	mG	Threshold
<b>11606</b>	Double	1	0.1	5	Degrees	Angle
<b>11607</b>	Uint16	1000	1	5000	Milliseconds	Duration
<b>7035</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8035</b>	String	"Towing"	0	160	Text	Sms text

### Crash Detection

---

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11400</b>	Uint8	0	0	3	0 - Disable	Scenario setting
					1 - Low priority	
					2 - High priority	
					3 - Panic priority	
<b>11401</b>	Uint8	5	0	1000	Milliseconds	Duration
<b>11402</b>	Uint16	1500	0	7900	mG	Threshold
<b>11406</b>	Int8	0	0	1	0 - Disable	Crash trace
					1 - Enable	
<b>7037</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8037</b>	String	"Crash"	0	160	Text	Sms text

## Excessive Idling

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11200</b>	Uint8	0	0	3	0 - Disable	Scenario settings
					1 - Low priority	
					2 - High priority	
					3 - Panic priority	
<b>11203</b>	Uint8	1	0	1	0 - Disable	Eventual records
					1 - Enable	
<b>11205</b>	Uint8	5	0	3600	Seconds	Time to stoped
<b>11206</b>	Uint8	2	0	3600	Seconds	Time to moving
<b>11204</b>	Uint8	0	0	2 (1 for FMB125)	0 - None	Output control
					1 - DOUT 1	
					2 - DOUT 2	
<b>11201</b>	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
<b>11202</b>	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
<b>7033</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8033</b>	String	"Idling Event"	0	160	Text	Sms text

## AutoGeofencing scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>20000</b>	Uint8	0	0	3	0 - Disable	Priority
					1 - Low priority	
					2 - High priority	
					3 - Panic priority	
<b>20002</b>	Uint8	1	0	1	0 - Disable	Eventual records
					1 - Enable	
<b>20003</b>	Uint16	5	0	65535	Minutes	Activation timeout
<b>20001</b>	Uint8	0	0	2	0 - On Exit	AutoGeofence event generating
					1 - On Entrance	
					2 - On both	
<b>20005</b>	Uint8	0	0	5	0 - Power voltage	Deactivate by
					2 - Engine RPM	
<b>20004</b>	Uint32	100	0	1000000	Value	Radius
<b>7030</b>	Uint64	0	0	10	Phone number	Send SMS to
<b>8030</b>	String	"AutoGeofence"	0	160	Text	Sms text

# Manual Geofence

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>20100</b>	Uint8	0	0	3	0 - Disabled 1 - Low 2 - High 3 - Panic	Priority
<b>20101</b>	Uint8	0	0	3	0 - No event 1 - On exiting zone 2 - On entering zone 3 - On both	Operand
<b>20102</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>20103</b>	Uint32	1	0	1000000	Border value	Frame border
<b>20104</b>	Uint8	0	0	1	0 - Circle 1 - Rectangle	Shape type
<b>20105</b>	Uint32	5	0	1000000	Metres	Radius
<b>20106</b>	Double	0	-180	180	Coordinate	X1
<b>20107</b>	Double	0	-90	90	Coordinate	Y1
<b>20108</b>	Double	0	-180	180	Coordinate	X2
<b>20109</b>	Double	0	-90	90	Coordinate	Y2
<b>20110</b>	Uint8	0	0	1	0 - Disable 1 - Enable	Overspeeding
<b>20111</b>	Uint16	90	0	1000	km/h	Max allowed speed
<b>7025</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8025</b>	String	"Geozone Zone #"	0	160	Text	SMS text

Similarly to a group defined in the upper table:

Zone number	Parameter														
	Priority	Event generating	Eventual records	Frame border	Shape type	Radius	X1	Y1	X2	Y2	Overspeeding	Max allowed speed	Send sms to	SMS text	
1	20100	20101	20102	20103	20104	20105	20106	20107	20108	20109	20110	20111	7025	8025	
2	20120	20121	20122	20123	20124	20125	20126	20127	20128	20129	20130	20131	7026	8026	
3	20140	20141	20142	20143	20144	20145	20146	20147	20148	20149	20150	20151	7027	8027	
4	20160	20161	20162	20163	20164	20165	20166	20167	20168	20169	20170	20171	7028	8028	
5	20180	20181	20182	20183	20184	20185	20186	20187	20188	20189	20190	20191	7029	8029	
6	20200	20201	20202	20203	20204	20205	20206	20207	20208	20209	20210	20211	7071	8071	
7	20220	20221	20222	20223	20224	20225	20226	20227	20228	20229	20230	20231	7072	8072	
8	20240	20241	20242	20243	20244	20245	20246	20247	20248	20249	20250	20251	7073	8073	
9	20260	20261	20262	20263	20264	20265	20266	20267	20268	20269	20270	20271	7074	8074	
10	20280	20281	20282	20283	20284	20285	20286	20287	20288	20289	20290	20291	7075	8075	
11	20300	20301	20302	20303	20304	20305	20306	20307	20308	20309	20310	20311	7076	8076	
12	20320	20321	20322	20323	20324	20325	20326	20327	20328	20329	20330	20331	7077	8077	
13	20340	20341	20342	20343	20344	20345	20346	20347	20348	20349	20350	20351	7078	8078	
14	20360	20361	20362	20363	20364	20365	20366	20367	20368	20369	20370	20371	7079	8079	
15	20380	20381	20382	20383	20384	20385	20386	20387	20388	20389	20390	20391	7080	8080	
16	20400	20401	20402	20403	20404	20405	20406	20407	20408	20409	20410	20411	7081	8081	
17	20420	20421	20422	20423	20424	20425	20426	20427	20428	20429	20430	20431	7082	8082	
18	20440	20441	20442	20443	20444	20445	20446	20447	20448	20449	20450	20451	7083	8083	
19	20460	20461	20462	20463	20464	20465	20466	20467	20468	20469	20470	20471	7084	8084	
20	20480	20481	20482	20483	20484	20485	20486	20487	20488	20489	20490	20491	7085	8085	
21	20500	20501	20502	20503	20504	20505	20506	20507	20508	20509	20510	20511	7086	8086	
22	20520	20521	20522	20523	20524	20525	20526	20527	20528	20529	20530	20531	7087	8087	
23	20540	20541	20542	20543	20544	20545	20546	20547	20548	20549	20550	20551	7088	8088	
24	20560	20561	20562	20563	20564	20565	20566	20567	20568	20569	20570	20571	7089	8089	
25	20580	20581	20582	20583	20584	20585	20586	20587	20588	20589	20590	20591	7090	8090	
26	20600	20601	20602	20603	20604	20605	20606	20607	20608	20609	20610	20611	7091	8091	
27	20620	20621	20622	20623	20624	20625	20626	20627	20628	20629	20630	20631	7092	8092	
28	20640	20641	20642	20643	20644	20645	20646	20647	20648	20649	20650	20651	7093	8093	
29	20660	20661	20662	20663	20664	20665	20666	20667	20668	20669	20670	20671	7094	8094	
30	20680	20681	20682	20683	20684	20685	20686	20687	20688	20689	20690	20691	7095	8095	
31	20700	20701	20702	20703	20704	20705	20706	20707	20708	20709	20710	20711	7096	8096	
32	20720	20721	20722	20723	20724	20725	20726	20727	20728	20729	20730	20731	7097	8097	
33	20740	20741	20742	20743	20744	20745	20746	20747	20748	20749	20750	20751	7098	8098	
34	20760	20761	20762	20763	20764	20765	20766	20767	20768	20769	20770	20771	7099	8099	
35	20780	20781	20782	20783	20784	20785	20786	20787	20788	20789	20790	20791	7100	8100	
36	20800	20801	20802	20803	20804	20805	20806	20807	20808	20809	20810	20811	7101	8101	
37	20820	20821	20822	20823	20824	20825	20826	20827	20828	20829	20830	20831	7102	8102	
38	20840	20841	20842	20843	20844	20845	20846	20847	20848	20849	20850	20851	7103	8103	
39	20860	20861	20862	20863	20864	20865	20866	20867	20868	20869	20870	20871	7104	8104	
40	20880	20881	20882	20883	20884	20885	20886	20887	20888	20889	20890	20891	7105	8105	
41	20900	20901	20902	20903	20904	20905	20906	20907	20908	20909	20910	20911	7106	8106	
42	20920	20921	20922	20923	20924	20925	20926	20927	20928	20929	20930	20931	7107	8107	
43	20940	20941	20942	20943	20944	20945	20946	20947	20948	20949	20950	20951	7108	8108	
44	20960	20961	20962	20963	20964	20965	20966	20967	20968	20969	20970	20971	7109	8109	
45	20980	20981	20982	20983	20984	20985	20986	20987	20988	20989	20990	20991	7110	8110	
46	21000	21001	21002	21003	21004	21005	21006	21007	21008	21009	21010	21011	7111	8111	
47	21020	21021	21022	21023	21024	21025	21026	21027	21028	21029	21030	21031	7112	8112	
48	21040	21041	21042	21043	21044	21045	21046	21047	21048	21049	21050	21051	7113	8113	
49	21060	21061	21062	21063	21064	21065	21066	21067	21068	21069	21070	21071	7114	8114	
50	21080	21081	21082	21083	21084	21085	21086	21087	21088	21089	21090	21091	7115	8115	

## Bluetooth

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>800</b>	Uint8	0	0	2	0 - Disable 1 - Enable hidden 2 - Enable visible	Scenario settings
<b>801</b>	String	"FMB1YX_(last 7 IMEI numbers)"	0	16	ID	Local name
<b>802</b>	String	"5555"	0	4	PIN	Local PIN
<b>803</b>	Uint8	0	0	3	0 - PIN only 1 - PIN and MAC 2 - MAC only 3 - None	Security mode
<b>804</b>	String	0	0	12	MAC	External MAC
<b>805</b>	String	0	0	30	ID	External name
<b>806</b>	String	0	0	8	PIN	External PIN
<b>807</b>	Uint8	0	0	3	0 - None 1 - Hands free 2 - OBDII 3 - Data link	Security mode
<b>830-834</b>	String	-	0	12	MAC list	Authorized devices MAC list

  

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1100</b>	Uint16	120	120	65535	Seconds	TZ-BT04/05/05B Update frequency
<b>1110</b>	Uint8	4	0	6	0 - 1 1 - 2 2 - 3 3 - 4 4 - 5 5 - 6 6 - 7	BT Power Level
<b>1111</b>	Uint8	0	0	4	ID	BLE broadcasting service ID

## Bluetooth 4.0

### Common Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1115</b>	Uint8	0	0	1	0 - Disable 1 - Enable	Non Stop Scan
<b>1100</b>	Int32	120	30	65535	Seconds	TZ-BT04 Update frequency
<b>1113</b>	Int32	60	5	120	Seconds	BLE Scan duration
<b>1114</b>	Int32	30	0	65535	Seconds	Scan retries until error
<b>1110</b>	Int8	5	1	7	Range in meters: 1 - < 0.5 2 - 0.5 3 - 11 4 - 13 5 - 15 6 - 27 7 - 50	BTPower
<b>1111</b>	String	-	-	TextMaxLength="4"	-	BLE broadcasting service ID

<b>1112</b>	Int8	1	0	1	0 - Prohibit 1 - Allow	BLE connection control
-------------	------	---	---	---	---------------------------	------------------------

## BLE functionalities Connection #1

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1200</b>	Uint8	0	0	2	0 - Disabled 1 - TZ-BT04/05/05B sensor 2 - Efento sensor	Working mode
<b>1201</b>	Uint8	0	0	8	ID	
<b>1202</b>	String	0	0	12	MAC	

## BLE functionalities Connection #2

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1250</b>	Uint8	0	0	2	0 - Disabled 1 - TZ-BT04/05/05B sensor 2 - Efento sensor	Working mode
<b>1251</b>	Uint8	0	0	8	ID	
<b>1252</b>	String	0	0	12	MAC	

## BLE functionalities Connection #3

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1300</b>	Uint8	0	0	2	0 - Disabled 1 - TZ-BT04/05/05B sensor 2 - Efento sensor	Working mode
<b>1301</b>	Uint8	0	0	8	ID	
<b>1302</b>	String	0	0	12	MAC	

## BLE functionalities Connection #4

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1350</b>	Uint8	0	0	2	0 - Disabled 1 - TZ-BT04/05/05B sensor 2 - Efento sensor	Working mode
<b>1351</b>	Uint8	-	0	8	ID	
<b>1352</b>	String	0	0	12	MAC	

## Beacon List Parameters

Parameter ID	Parameter Type	Default value	Value Range		Value	Parameter Name
			Min	Max		
134	Uint8	0	0	2	0 - Disabled 1 - All 2 - Configured	Beacon Detection
136	Uint8	0	0	1	0 - Eventual 1 - Periodic	

137	Uint32	60	0	259200	Seconds	Record Period on Move (s)
139	Uint32	60	0	259200	Seconds	Record Period on Stop (s)

### Beacon List

Parameter ID	iBeacon	EddyStone
1600	UUID:Major:Minor	Namespace:Instance ID
...		
1624		

Example:

```
<login><space><password><space>setparam
1600:4B5C049F515341FCA950D2C264414E10-0005-0006
<login><space><password><space>setparam 1600:00112233445566778899-ABCDE0810047
```

## Tracking on Demand

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>10990</b>	Uint8	10	5	60	Tracking period
<b>10991</b>	Uint16	600	300	3600	Tracking duration

## I/O parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>50000</b>	Uint8	1	0	3	Ignition <a href="#">Priority</a>
<b>50001</b>	Uint8	5	0	6	Ignition <a href="#">Operand</a>
<b>50002</b>	Uint8	0	0	1	Ignition High level
<b>50003</b>	Uint8	0	0	1	Ignition Low level
<b>50004</b>	Uint8	0	0	1	Ignition <a href="#">Event only</a>
<b>50005</b>	Uint16	10	0	65535	Ignition Average
<b>7000</b>	Uint8	0	0	10	Send SMS
<b>8000</b>	String	0	0	160	SMS Text
<b>50010</b>	Uint8	1	0	3	Movement <a href="#">Priority</a>
<b>50011</b>	Uint8	5	0	6	Movement <a href="#">Operand</a>
<b>50012</b>	Uint8	0	0	1	Movement High level
<b>50013</b>	Uint8	0	0	1	Movement Low level
<b>50014</b>	Uint8	0	0	1	Movement <a href="#">Event only</a>
<b>50015</b>	Uint16	1	0	65535	Movement Average
<b>7001</b>	Uint8	0	0	10	Send SMS
<b>8001</b>	String	0	0	160	SMS Text
<b>50020</b>	Uint8	1	0	3	Data Mode <a href="#">Priority</a>
<b>50021</b>	Uint8	3	0	6	Data Mode Operand
<b>50022</b>	Uint8	0	0	5	Data Mode High level
<b>50023</b>	Uint8	0	0	5	Data Mode Low level
<b>50024</b>	Uint8	0	0	1	Data Mode <a href="#">Event only</a>
<b>7002</b>	Uint8	0	0	10	Send SMS
<b>8002</b>	String	0	0	160	SMS Text
<b>50030</b>	Uint8	1	0	3	GSM Signal <a href="#">Priority</a>
<b>50031</b>	Uint8	3	0	6	GSM Signal <a href="#">Operand</a>

<b>50032</b>	Uint8	0	0	5	GSM Signal High level
<b>50033</b>	Uint8	0	0	5	GSM Signal Low level
<b>50034</b>	Uint8	0	0	1	GSM Signal <a href="#">Event only</a>
<b>50035</b>	Uint16	1	0	65535	GSM Signal Average
<b>7003</b>	Uint8	0	0	10	Send SMS
<b>8003</b>	String	0	0	160	SMS Text
<b>50040</b>	Uint8	1	0	3	Sleep <a href="#">Priority</a>
<b>50041</b>	Uint8	3	0	6	Sleep <a href="#">Operand</a>
<b>50042</b>	Uint8	0	0	2	Sleep High level
<b>50043</b>	Uint8	0	0	2	Sleep Low level
<b>50044</b>	Uint8	0	0	1	Sleep <a href="#">Event only</a>
<b>7004</b>	Uint8	0	0	10	Send SMS
<b>8004</b>	String	0	0	160	SMS Text
<b>50050</b>	Uint8	1	0	3	GNSS Status <a href="#">Priority</a>
<b>50051</b>	Uint8	3	0	6	GNSS Status <a href="#">Operand</a>
<b>50052</b>	Uint8	0	0	5	GNSS Status High level
<b>50053</b>	Uint8	0	0	5	GNSS Status Low level
<b>50053</b>	Uint8	0	0	1	GNSS Status <a href="#">Event only</a>
<b>7005</b>	Uint8	0	0	10	Send SMS
<b>8005</b>	String	0	0	160	SMS Text
<b>50060</b>	Uint8	0	0	3	GNSS PDOP <a href="#">Priority</a>
<b>5061</b>	Uint8	3	0	6	GNSS PDOP <a href="#">Operand</a>
<b>5062</b>	Uint16	0	0	1000	GNSS PDOP High level
<b>5063</b>	Uint16	0	0	1000	GNSS PDOP Low level
<b>5064</b>	Uint8	0	0	1	GNSS PDOP <a href="#">Event only</a>
<b>5065</b>	Uint16	10	0	65535	GNSS PDOP Average
<b>7006</b>	Uint8	0	0	10	Send SMS
<b>8006</b>	String	0	0	160	SMS Text
<b>50070</b>	Uint8	1	0	3	GNSS HDOP <a href="#">Priority</a>
<b>50071</b>	Uint8	3	0	6	GNSS HDOP <a href="#">Operand</a>
<b>50072</b>	Uint16	0	0	1000	GNSS HDOP High level
<b>50073</b>	Uint16	0	0	1000	GNSS HDOP Low level
<b>50074</b>	Uint8	0	0	1	GNSS HDOP <a href="#">Event only</a>
<b>50075</b>	Uint16	10	0	65535	GNSS HDOP Average
<b>7007</b>	Uint8	0	0	10	Send SMS
<b>8007</b>	String	0	0	160	SMS Text
<b>50080</b>	Uint8	1	0	3	External Voltage <a href="#">Priority</a>
<b>50081</b>	Uint8	6	0	6	External Voltage <a href="#">Operand</a>
<b>50082</b>	Uint16	1000	0	60000	External Voltage High level
<b>50083</b>	Uint16	0	0	60000	External Voltage Low level
<b>50084</b>	Uint8	0	0	1	External Voltage <a href="#">Event only</a>
<b>50085</b>	Uint16	10	0	65535	External Voltage Average
<b>7008</b>	Uint8	0	0	10	Send SMS
<b>8008</b>	String	0	0	160	SMS Text
<b>50090</b>	Uint8	1	0	3	Speed <a href="#">Priority</a>
<b>50091</b>	Uint8	3	0	6	Speed <a href="#">Operand</a>
<b>50092</b>	Uint16	0	0	300	Speed High level
<b>50093</b>	Uint16	0	0	300	Speed Low level
<b>50094</b>	Uint8	0	0	1	Speed <a href="#">Event only</a>
<b>50095</b>	Uint16	1	0	65535	Speed Average
<b>7009</b>	Uint8	0	0	10	Send SMS
<b>8009</b>	String	0	0	160	SMS Text
<b>50100</b>	Uint8	0	0	3	GSM Cell ID <a href="#">Priority</a>
<b>50101</b>	Uint8	3	0	6	GSM Cell ID <a href="#">Operand</a>
<b>50102</b>	Uint32	0	0	999999	GSM Cell ID High level
<b>50103</b>	Uint32	0	0	999999	GSM Cell ID Low level
<b>50104</b>	Uint8	0	0	1	GSM Cell ID <a href="#">Event only</a>
<b>7010</b>	Uint8	0	0	10	Send SMS

<b>8010</b>	String	0	0	160	SMS Text
<b>50110</b>	Uint8	0	0	3	GSM Area Code <a href="#">Priority</a>
<b>50111</b>	Uint8	3	0	6	GSM Area Code <a href="#">Operand</a>
<b>50112</b>	Uint32	0	0	999999	GSM Area Code High level
<b>50113</b>	Uint32	0	0	999999	GSM Area Code Low level
<b>50114</b>	Uint8	0	0	1	GSM Area Code <a href="#">Event only</a>
<b>7011</b>	Uint8	0	0	10	Send SMS
<b>8011</b>	String	0	0	160	SMS Text
<b>50120</b>	Uint8	1	0	3	Battery Voltage <a href="#">Priority</a>
<b>50121</b>	Uint8	3	0	6	Battery Voltage <a href="#">Operand</a>
<b>50122</b>	Uint16	0	0	5000	Battery Voltage High level
<b>50123</b>	Uint16	0	0	5000	Battery Voltage Low level
<b>50124</b>	Uint8	0	0	1	Battery Voltage <a href="#">Event only</a>
<b>50125</b>	Uint8	0	0	10	Battery Voltage Average
<b>7012</b>	Uint8	0	0	10	Send SMS
<b>8012</b>	String	0	0	160	SMS Text
<b>50130</b>	Uint8	1	0	3	Battery Current <a href="#">Priority</a>
<b>50131</b>	Uint8	3	0	6	Battery Current <a href="#">Operand</a>
<b>50132</b>	Uint16	0	0	5000	Battery Current High level
<b>50133</b>	Uint16	0	0	5000	Battery Current Low level
<b>50134</b>	Uint8	0	0	1	Battery Current <a href="#">Event only</a>
<b>50135</b>	Uint8	0	0	10	Battery Current Average
<b>7013</b>	Uint8	0	0	10	Send SMS
<b>8013</b>	String	0	0	160	SMS Text
<b>50140</b>	Uint8	0	0	3	Active GSM Operator <a href="#">Priority</a>
<b>50141</b>	Uint8	3	0	6	Active GSM Operator <a href="#">Operand</a>
<b>50142</b>	Uint32	0	0	999999	Active GSM Operator High level
<b>50143</b>	Uint32	0	0	999999	Active GSM Operator Low level
<b>50144</b>	Uint8	0	0	1	Active GSM Operator <a href="#">Event only</a>
<b>7014</b>	Uint8	0	0	10	Send SMS
<b>8014</b>	String	0	0	160	SMS Text
<b>50150</b>	Uint8	0	0	3	Trip Odometer <a href="#">Priority</a>
<b>50151</b>	Uint8	3	0	6	Trip Odometer <a href="#">Operand</a>
<b>50152</b>	Uint32	0	0	1000000	Trip Odometer High level
<b>50153</b>	Uint32	0	0	1000000	Trip Odometer Low level
<b>50154</b>	Uint8	0	0	1	Trip Odometer <a href="#">Event only</a>
<b>7015</b>	Uint8	0	0	10	Send SMS
<b>8015</b>	String	0	0	160	SMS Text
<b>50160</b>	Uint8	0	0	3	Total Odometer <a href="#">Priority</a>
<b>50161</b>	Uint8	3	0	6	Total Odometer <a href="#">Operand</a>
<b>50162</b>	Uint32	0	0	10000000	Total Odometer High level
<b>50163</b>	Uint32	0	0	10000000	Total Odometer Low level
<b>50164</b>	Uint8	0	0	1	Total Odometer <a href="#">Event only</a>
<b>7016</b>	Uint8	0	0	10	Send SMS
<b>8016</b>	String	0	0	160	SMS Text
<b>50200</b>	Uint8	0	0	3	Fuel Used GPS <a href="#">Priority</a>
<b>50201</b>	Uint8	3	0	6	Fuel Used GPS <a href="#">Operand</a>
<b>50202</b>	Uint32	0	0	1000000	Fuel Used GPS High level
<b>50203</b>	Uint32	0	0	1000000	Fuel Used GPS Low level
<b>50204</b>	Uint8	0	0	1	Fuel Used GPS <a href="#">Event only</a>
<b>50205</b>	Uint16	1	0	65535	Fuel Used GPS Average
<b>7020</b>	Uint8	0	0	10	Send SMS
<b>8020</b>	String	0	0	160	SMS Text
<b>50210</b>	Uint8	0	0	3	Fuel Rate GPS <a href="#">Priority</a>
<b>50211</b>	Uint8	3	0	6	Fuel Rate GPS <a href="#">Operand</a>
<b>50212</b>	Uint32	0	0	1000000	Fuel Rate GPS High level
<b>50213</b>	Uint32	0	0	1000000	Fuel Rate GPS Low level
<b>50214</b>	Uint8	0	0	1	Fuel Rate GPS <a href="#">Event only</a>

<b>50215</b>	Uint16	1	0	65535	Fuel Rate GPS Average
<b>7021</b>	Uint8	0	0	10	Send SMS
<b>8021</b>	String	0	0	160	SMS Text
<b>50220</b>	Uint8	0	0	3	Axis X <a href="#">Priority</a>
<b>50221</b>	Uint8	3	0	6	Axis X <a href="#">Operand</a>
<b>50222</b>	Uint16	0	-8000	8000	Axis X High level
<b>50223</b>	Uint16	0	-8000	8000	Axis X Low level
<b>50224</b>	Uint8	0	0	1	Axis X <a href="#">Event only</a>
<b>50225</b>	Uint16	1	0	65535	Axis X Average
<b>7022</b>	Uint8	0	0	10	Send SMS
<b>8022</b>	String	0	0	160	SMS Text
<b>50230</b>	Uint8	0	0	3	Axis Y <a href="#">Priority</a>
<b>50231</b>	Uint8	3	0	6	Axis Y <a href="#">Operand</a>
<b>50232</b>	Uint16	0	-8000	8000	Axis Y High level
<b>50233</b>	Uint16	0	-8000	8000	Axis Y Low level
<b>50234</b>	Uint8	0	0	1	Axis Y <a href="#">Event only</a>
<b>50235</b>	Uint16	1	0	65535	Axis Y Average
<b>7023</b>	Uint8	0	0	10	Send SMS
<b>8023</b>	String	0	0	160	SMS Text
<b>50240</b>	Uint8	0	0	3	Axis Z <a href="#">Priority</a>
<b>50241</b>	Uint8	3	0	6	Axis Z <a href="#">Operand</a>
<b>50242</b>	Uint16	0	-8000	8000	Axis Z High level
<b>50243</b>	Uint16	0	-8000	8000	Axis Z Low level
<b>50244</b>	Uint8	0	0	1	Axis Z <a href="#">Event only</a>
<b>50245</b>	Uint16	1	0	65535	Axis Z Average
<b>7024</b>	Uint8	0	0	10	Send SMS
<b>8024</b>	String	0	0	160	SMS Text
<b>50250</b>	Uint8	0	0	3	ICCID <a href="#">Priority</a>
<b>50251</b>	Uint8	3	0	6	ICCID <a href="#">Operand</a>
<b>50254</b>	Uint8	0	0	1	ICCID <a href="#">Event only</a>
<b>7069</b>	Uint8	0	0	10	Send SMS
<b>8069</b>	String	0	0	160	SMS Text
<b>7135</b>	Uint8	0	0	10	Send SMS
<b>8135</b>	String	0	0	160	SMS Text
<b>50510</b>	Uint8	0	0	3	Eco Score <a href="#">Priority</a>
<b>50511</b>	Uint8	3	0	6	Eco Score <a href="#">Operand</a>
<b>50512</b>	Uint8	0	0	1	Eco Score High level
<b>50513</b>	Uint8	0	0	1	Eco Score Low level
<b>50514</b>	Uint8	0	0	1	Eco Score <a href="#">Event only</a>
<b>7220</b>	Uint8	0	0	10	Send SMS
<b>8220</b>	String	0	0	160	SMS Text
<b>50690</b>	Uint8	0	0	3	Battery level % <a href="#">Priority</a>
<b>50691</b>	Uint8	0	0	6	Battery level % <a href="#">Operand</a>
<b>50692</b>	Uint8	0	0	100	Battery level % High level
<b>50693</b>	Uint8	0	0	100	Battery level % Low level
<b>50694</b>	Uint8	0	0	1	Battery level % <a href="#">Event only</a>
<b>50695</b>	Uint16	1	0	65535	Battery level % Average
<b>7243</b>	Uint8	0	0	10	Send SMS
<b>8243</b>	String	0	0	160	SMS Text
<b>50720</b>	Uint8	0	0	3	BT Status <a href="#">Priority</a>
<b>50721</b>	Uint8	5	0	6	BT Status <a href="#">Operand</a>
<b>50722</b>	Uint8	0	0	4	BT Status High level
<b>50723</b>	Uint8	0	0	3	BT Status Low level
<b>50724</b>	Uint8	0	0	1	BT Status <a href="#">Event only</a>
<b>50725</b>	Uint16	1	0	65535	BT Status Average
<b>7250</b>	Uint8	0	0	10	Send SMS
<b>8250</b>	String	0	0	160	SMS Text

# OBD II (Bluetooth)

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>40100</b>	Uint8	0	0	3	0 - Disabled 1 - Low 2 - High 3 - Panic	Priority
<b>40101</b>	Uint8	3	0	6	0 - On range exit 1 - On range entrance 2 - On both 3 - Monitoring 4 - Hysteresis 5 - On change 6 - On delta change	Operand
<b>40102</b>	Uint8	0	0	255	High value	High level
<b>40103</b>	Uint8	0	0	255	Low value	Low level
<b>40104</b>	Uint8	0	0	1	0 - Disable 1 - Enable	Event only
<b>7038</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8038</b>	String	"Number of DTC"	0	160	Text	SMS text

Similarly to a group defined in the upper table:

Name	Parameter						
	Priority	Low level	High level	Event only	Operand	Send SMS to	SMS text
Number Of DTC	40100	40103	40102	40104	40101	7038	8038
Engine Load	40110	40113	40112	40114	40111	7039	8039
Coolant Temperature	40120	40123	40122	40124	40121	7040	8040
Short Fuel Trim	40130	40133	40132	40134	40131	7041	8041
Fuel Pressure	40140	40143	40142	40144	40141	7042	8042
Intake Map	40150	40153	40152	40154	40151	7043	8043
Engine RPM	40160	40163	40162	40164	40161	7044	8044
Vehicle speed	40170	40173	40172	40174	40171	7045	8045
Timing advance	40180	40183	40182	40184	40181	7046	8046
Intake air temperature	40190	40193	40192	40194	40191	7047	8047
MAF	40200	40203	40202	40204	40201	7048	8048
Throttle position	40210	40213	40212	40214	40211	7049	8049
Run time since engine start	40220	40223	40222	40224	40221	7050	8050
Distance traveled MIL on	40230	40233	40232	40234	40231	7051	8051
Relative fuel rail pressure	40240	40243	40242	40244	40241	7052	8052
Direct fuel rail pressure	40250	40253	40252	40254	40251	7053	8053
Commanded EGR	40260	40263	40262	40264	40261	7054	8054
EGR error	40270	40273	40272	40274	40271	7055	8055
Fuel level	40280	40283	40282	40284	40281	7056	8056
Distance traveled since codes clear	40290	40293	40292	40294	40291	7057	8057
Barometric pressure	40300	40303	40302	40304	40301	7058	8058
Control module voltage	40310	40313	40312	40314	40311	7059	8059
Absolute load value	40320	40323	40322	40324	40321	7060	8060
Ambient air temperature	40330	40333	40332	40334	40331	7061	8061
Time run with MIL on	40340	40343	40342	40344	40341	7062	8062
Time since trouble codes cleared	40350	40353	40352	40354	40351	7063	8063
Fuel Type	40560	40563	40562	40564	40561	7633	8633
Absolute fuel rail pressure	40360	40363	40362	40364	40361	7064	8064
Hybrid battery pack remaining life	40370	40373	40372	40374	40371	7065	8065
Engine oil temperature	40380	40383	40382	40384	40381	7066	8066
Fuel injection timing	40390	40393	40392	40394	40391	7067	8067
Fuel Rate	40400	40403	40402	40404	40401	7068	8068
Command Equivalence Ratio	40460	40463	40462	40464	40461	7524	8524
Intake MAP (2 Bytes)	40470	40473	40472	40474	40471	7525	8525
Hybrid Vehicle System Voltage	40480	40483	40482	40484	40481	7526	8526
Hybrid Vehicle System Current	40490	40493	40492	40494	40491	7527	8527

<b>Fault Codes</b>	<b>40420</b>	-	-	<b>40424</b>	<b>40421</b>	<b>7264</b>	<b>8264</b>
VIN	<b>40410</b>	-	-	<b>40414</b>	<b>40411</b>	<b>7241</b>	<b>8241</b>
<b>OEM Total Mileage</b>	<b>40430</b>	<b>40433</b>	<b>40432</b>	<b>40434</b>	<b>40431</b>	<b>7522</b>	<b>8522</b>
<b>OEM Fuel Level</b>	<b>40440</b>	<b>40443</b>	<b>40442</b>	<b>40444</b>	<b>40441</b>	<b>7529</b>	<b>8529</b>
<b>OEM Remaining Distance</b>	<b>40520</b>	<b>40523</b>	<b>40522</b>	<b>40524</b>	<b>40521</b>	<b>7628</b>	<b>8628</b>
<b>OEM Battery Charge State</b>	<b>40570</b>	<b>40573</b>	<b>40572</b>	<b>40574</b>	<b>40571</b>	<b>7634</b>	<b>8634</b>
<b>OEM Battery Charge Level</b>	<b>40580</b>	<b>40583</b>	<b>40582</b>	<b>40584</b>	<b>40581</b>	<b>7635</b>	<b>8635</b>