

# FMB110 Security info

[Main Page](#) > [Advanced Trackers](#) > [FMB110](#) > [FMB110 Configuration](#) > **FMB110 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB110 Security info web interface. At the top, there are navigation buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. A SIM card icon and IMEI information are also visible. The main content area is divided into several sections:

- Device Info:** A table showing device details.

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB <a href="#">Format</a>	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	35063402001000	00:00:47	Not Charging 0%
- GNSS Info:** A sub-section with tabs for 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. It contains:
  - GNSS Status:** Module Status (ON), GNSS Packets (32), Fix Status (No fix), Fix Time (00:00:00).
  - Satellites:** A table showing visible and in-use satellites.

Visible:		In Use:	
GPS	GLONASS	GPS	GLONASS
4	0	0	0
BeiDou Galileo		BeiDou Galileo	
0	0	0	0
Total In View		Total In Use	
4		0	
  - Location:** A table showing location data.

Latitude/Longitude	Altitude	HDOP
0,0	0	0
Speed	Angle	PDOP
0 km/h	0°	0

\*Please note that This feature will only show up in configurator when device is connected to a computer.