

## **FMB120 OBD II and LVCAN I/O settings**

In OBD II (Bluetooth®) column are shown I/O elements which information can be obtained from OBD II Bluetooth® dongle connected to FMB120 device and in LVCAN column are shown I/O elements which information can be obtained from LV-CAN200 or ALL-CAN300 connected to FMB120 device. All I/O configuration is the same as described in [I/O settings](#) section, except OBD II (Bluetooth®) I/O element don't have averaging constant parameter.

Detailed description about LVCAN I/O element configuration described in [FMB120 with LV-CAN200 and ALL-CAN300 CAN adapters](#).