

FMB122 Security info

[Main Page](#) > [Advanced Trackers](#) > [FMB122](#) > [FMB122 Configuration](#) > **FMB122 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMB122 Security info web interface. The top navigation bar includes the Teltonika logo and a series of utility buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. On the right side of the top bar, there is a SIM card icon and text indicating 'IMEI 35963309001000', 'FW 03.25.15 Rev: 1.0', and 'Configuration 6.1.17.0'. The main content area is divided into several sections. The 'Device Info' section shows a table with columns for Device Name, Last Start Time (31/12/2003 06:00:18 p. m.), Power Voltage (17105 mV), Ext Storage (used/total) (0 / 122 MB), and Battery Voltage (0 mV). Below this, another row shows Firmware Version (03.25.15 Rev: 1.0), RTC Time (31/12/2003 06:01:05 p. m.), Device IMEI (35963309001000), Device Uptime (00:00:47), and Internal Battery Status (Not Charging 0%). The 'GNSS Info' section is active, showing 'GNSS Status' (Module Status ON, GNSS Packets 32, Fix Status No fix, Fix Time 00:00:00) and 'Satellites' (Visible: GPS 4, GLONASS 0, BeiDou 0, Galileo 0; In Use: GPS 0, GLONASS 0, BeiDou 0, Galileo 0; Total In View 4, Total In Use 0). The 'Location' section shows Latitude/Longitude (0,0), Altitude (0), HDOP (0), Speed (0 km/h), Angle (0°), and PDOP (0). A sidebar on the left contains navigation links for Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II. The bottom of the interface features social media icons and a settings gear icon.

*Please note that This feature will only show up in configurator when device is connected to a computer.