

# FMB140 LED status

[Main Page](#) > [CAN Trackers & Adapters](#) > [FMB140](#) > [FMB140 Manual](#) > **FMB140 LED status**

This section is an explanation of LED indications on an FMB140 device.

## Navigation LED Indications

Behaviour	Meaning
<b>Permanently switched on</b>	GNSS signal is not received
<b>Blinking every second</b>	Normal mode, GNSS is working
<b>Off</b>	GNSS is turned off because: Device is not working or Device is in sleep mode
<b>Blinking fast constantly</b>	Device firmware is being flashed

## Status LED Indications

Behaviour	Meaning
<b>Blinking every second</b>	Normal mode
<b>Blinking every two seconds</b>	Sleep mode
<b>Blinking fast for a short time</b>	Modem activity
<b>Off</b>	Device is not working or Device is in boot mode

## CAN Status LED indications

Behaviour	Meaning
<b>Blinking fast constantly</b>	Reading CAN data from vehicle
<b>Permanently switched on</b>	CAN unit unresponsive
<b>Off</b>	Wrong program number or wrong wire connection or CAN processor is in sleep mode = CAN data not received