



Load from file

Save to file

Device not connected
Device type: FM8125
Configuration: 1.1.0

- Security
- System
- GPRS
- Data Acquisition
- SMS \ Call Settings
- GSM Operators
- Features
- Accelerometer Features
- Auto Geofence
- Manual Geofence
- Trip \ Odometer
- Bluetooth
- Bluetooth 4.0
- Beacon List
- 1-Wire
- I/O
- OBD II
- CAN Adapter
- RS232 \ RS485

Manual geofence selection

1 geozone

Manual geofence 1

Feature	Disable	Low Priority
	High Priority	Panic Priority

Generate Event	No Event	On Exit
	On Entrance	On Both

Eventual Records	Disable	Enable
------------------	---------	--------

Frame Border (m) 1

Shape Type

Circle	Rectangle
--------	-----------

Radius (m) 5

Latitude (Y1) 0,0

Longitude (X1) 0,0

Overspeeding	Disable	Enable
--------------	---------	--------

Max Allowed Speed (km/h) 90

Send SMS To

SMS Text Geozone Zone 1

