

# FMB640 Manual Geofence settings

[Main Page](#) > [EOL Products](#) > [FMB640](#) > [FMB640 Configuration](#) > **FMB640 Manual Geofence settings**

**Frame Border Size (meters) setting** defines Manual Geofence border size in meters.

**Geozones Overspeeding DOUT setting** defines DOUT control in **Manual Geofence Zones** overspeeding scenario, which also can be configured in **Manual Geofence Zones** TAB.

**DOUT ON Duration (ms)** defines value in milliseconds for how long DOUT should be active.

**DOUT OFF Duration (ms)** defines value in milliseconds for how long DOUT should be inactive.

The screenshot displays the configuration interface for the FMB640 device. On the left, a vertical sidebar contains a list of menu items, with 'Manual Geofence Settings' highlighted in blue. The main content area on the right shows a 'Set keyword' section with a 'Keyword' label and an empty text input field.

Security
System
GPRS
Data Acquisition
SMS \ Call Settings
SMS Events
GSM Operators
Features
Accelerometer Features
Auto Geofence
<b>Manual Geofence Settings</b>
Manual Geofence Zones
Trip \ Odometer
Bluetooth
iButton List
I/O
LVCAN
FMS IO
Manual CAN IO
Tachograph Data
RS232 \ RS485
CAN \ Tachograph

Set keyword

Keyword