

FMB641 LED status

[Main Page](#) > [EOL Products](#) > [FMB641](#) > [FMB641 Manual](#) > **FMB641 LED status**

This section is an explanation of LED indications on an FMB641 device.

Navigation LED Indications

Behaviour	Meaning
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sleep mode
Blinking fast constantly	Device firmware is being flashed

Status LED Indications

Behaviour	Meaning
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode