

# FMB641 Manual Geofence settings

[Main Page](#) > [EOL Products](#) > [FMB641](#) > [FMB641 Configuration](#) > **FMB641 Manual Geofence settings**

**Frame Border Size (meters) setting** defines Manual Geofence border size in meters.

**Geozones Overspeeding DOUT setting** defines DOUT control in **Manual Geofence Zones** overspeeding scenario, which also can be configured in **Manual Geofence Zones** TAB.

**DOUT ON Duration (ms)** defines value in milliseconds for how long DOUT should be active.

**DOUT OFF Duration (ms)** defines value in milliseconds for how long DOUT should be inactive.

The screenshot displays a configuration interface for the FMB641 device. On the left, a vertical menu lists various settings categories: Security, System, GPRS, Data Acquisition, SMS \ Call Settings, SMS Events, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence Settings, Manual Geofence Zones, Trip \ Odometer, Bluetooth, iButton List, I/O, LVCAN, FMS IO, Manual CAN IO, Tachograph Data, RS232 \ RS485, and CAN \ Tachograph. The 'Manual Geofence Settings' option is highlighted. To the right of the menu, a form titled 'Set keyword' is visible, containing a single input field labeled 'Keyword'.