

FMB641 Manual Geofence settings

[Main Page](#) > [Professional Trackers](#) > [FMB641](#) > [FMB641 Configuration](#) > **FMB641 Manual Geofence settings**

Frame Border Size (meters) setting defines Manual Geofence border size in meters.

Geozones Overspeeding Dout setting defines DOUT control in **Manual Geofence Zones** overspeeding scenario, which also can be configured in **Manual Geofence Zones TAB**.

DOUT ON Duration (ms) defines value in miliseconds for how long DOUT should be active.

DOUT OFF Duration (ms) defines value in miliseconds for how long DOUT should be inactive.

