

# FMB6 getinfo

Not Device

Example:

```
"INI:2022/10/25 11:25 RTC:2022/10/26 17:53 RST:1 ERR:1 SR:152 BR:0 CF:0 FG:0 FL:0 TU:21/0  
UT:0 SMS:6 NOGPS:0:4 GPS:3 SAT:15 RS:3 RF:0 SF:1678 MD:5"
```

<b>Response details</b>	<b>Description</b>
<b>INI</b>	Init time.
<b>RTC</b>	RTC time.
<b>RST</b>	Device restarts for any reason.
<b>ERR</b>	Modem restarts since startup.
<b>SR</b>	Records sent since startup.
<b>BR</b>	Bad records counter since startup.
<b>CF</b>	Obsolete always 0.
<b>FG</b>	Failed GPRS connect, counter since startup.
<b>FL</b>	Failed connection to AVL data server, counter since startup.
<b>TU</b>	Time until data send counter "main/backup - servers".
<b>UT</b>	UDP server response timeout, counter since startup.
<b>SMS</b>	Sent SMSs since startup.
<b>NOGPS</b>	No GNSS fix time, counter since startup.
<b>GPS</b>	GNSS module status.
<b>SAT</b>	GNSS satellites in use.
<b>RS</b>	Device reset cause.
<b>RF</b>	Not send records found in device memory.
<b>SF</b>	Failed to access SD card counter.
<b>MD</b>	Current active mode.