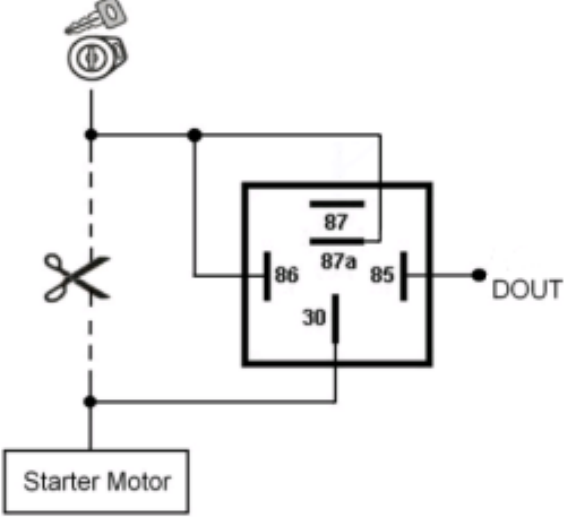


# FMB962 Accessories

[Main Page](#) > [EOL Products](#) > [FMB962](#) > [FMB962 Manual](#) > **FMB962 Accessories**

✘ Please order accessories separately as they are not included into device package.

Accessory and its description	Accessory connection schematic
<b>Alarm buttons, door sensors etc.</b> Alarm buttons, door sensors, ignition, etc. have two output states: high or low. FMB962 Digital inputs are used to detect these states.	<b>Panic button connection to FMB962</b> ✘
<b>Relays</b> In cases when sensor output signal is negative, an additional relay has to be installed to convert negative signal to positive.	<b>Inverting relay connection to FMB962</b> ✘
<b>Immobilizer relay</b> When connected as shown on the right hand side, FMB962 disables engine starter when output is ON.	<b>Immobilizer relay connection to FMB962 output</b> 
<b>Automotive relay</b> An ordinary automotive relay is used to invert input signal or to immobilize engine starter. Note that relays can be 12 V or 24 V capable.	<b>Automotive relay pinout</b> ✘