

https://wiki.teltonika-gps.com/view/FMB962_BLE_settings

FMB962 BLE settings

Blue-tooth 4.0 is mainly used for TZ-BT04/05/05B Sensors. FMB962 Supports up to 4 sensors at the time. Pairing sensor with FMB962 device:

- **Blue-tooth**
- **Mode** - Select Connection Mode #1 to #4 to attach your sensor.
- **Settings Id** - Enter you sensors ID which you want to connect.
- **Save to device** - Save your entered configuration to device.

