

FMB965 Security info

[Main Page](#) > [Basic Trackers](#) > [FMB965](#) > [FMB965 Configuration](#) > **FMB965 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the 'Security' section of the Teltonika FMB965 configurator. The top navigation bar includes options like 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. The main content area is divided into several sections:

- Device Info:** Displays key device parameters such as Device Name, Last Start Time (31/12/2003 06:00:18 p. m.), Power Voltage (17105 mV), Ext Storage (0 / 122 MB), and Battery Voltage (0 mV).
- GNSS Info:** Contains sub-sections for GNSS Status (Module Status ON, GNSS Packets 32), Satellites (Visible and In Use tables for GPS, GLONASS, BeiDou, Galileo), and Location (Latitude/Longitude, Altitude, HDOP, Speed, Angle, PDOP).

*Please note that This feature will only show up in configurator when device is connected to a computer.